

Mcomfort

FREQUENCY CONVERTER FOR DRIVE SYSTEMS IN LIFT,
CRANE AND HIGH-BAY STORAGE TECHNOLOGY



Operating Manual For Functional Description, Installation and Trouble Shooting

EU KONFORMITÄTSERKLÄRUNG 2005
EC-DECLARATION OF CONFORMITY 2005

Hersteller
Manufacturer

Micotrol International GmbH
Daimler Straße 6, D-63755 Alzenau

Erklärt in alleiniger Verantwortung, dass folgendes Produkt:
Hereby certifies on it's sole responsibility tha the following product:

MCOMFORT

Frequenzumrichter für Antriebe in Aufzügen
Frequency drives for elevators

auf das sich diese Erklärung bezieht, mit folgenden Richtlinien bzw. Normen übereinstimmt:

which is explicitly referred to by this Declaration meet the following directives standard(s):

Richtlinie 89/336 EWG, Elektromagnetische Verträglichkeit
Directive 89/336 EEC, Electromagnetic compatibility

Richtlinie 93/68 EWG, CE Kennzeichnung
Directive 93/68 EEC, CE marking

Europäische Normen:
European Standard:

EN 55011/22, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4,
EN 61000-4-5, EN 61000-4-6, EN 61000-4-11


Die oben genannte Firma hält Dokumentationen als Nachweis der Erfüllung der Sicherheitsziele und die wesentlichen Schutzanforderungen zur Einsicht bereit.

Documentation evidencing conformity with the requirements of the Directives is kept available for inspection at the above Manufacture's.

Alzenau den 01.10.2005

Ort und Datum der Ausstellung
Place and date of issue

rechtsverbindliche Unterschrift
Name and signature of authorised Person

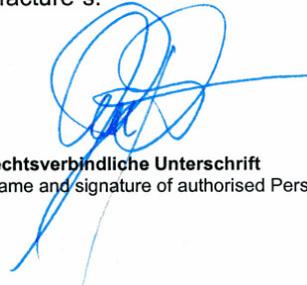

1 About this Manual	5
2 Description of the unit	8
2.1 Application and definitions	9
2.2 Functions and features	10
2.3 Basic design	11
2.4 Schematic lift run	12
3 Unit design	15
3.1 Selecting the proper controller	16
3.2 Power classes and type codes	16
3.3 Operating conditions	17
3.4 Installation	18
3.4.1 General notes and safety precautions	18
3.4.2 Installation in the Control Cabinet	18
3.4.3 Noise suppression	21
3.4.4 Fusing	24
3.5 Safety features	24
4 Interfaces	26
4.1 Mains and motor connections	27
4.2 Encoder connection	29
4.3 Interfaces to the control system	31
4.3.1 Inputs in the controller	31
4.3.2 Outputs from the controller	33
4.4 Motor thermistor	35
4.5 Fault memory	35
4.6 Brake resistor	35
4.6.1 Choice of brake resistor	35
4.6.2 Installation instructions	36
4.7 Shaft information	37
4.8 Serial interfaces	37
4.8.1 MICOBUS (optional)	38
4.8.2 Control system setting via PC	38
5 Menus and parameters	39
5.1 Preliminaries	40
5.2 Basic menu operation	40
5.2.1 Display, keypad, menus	40
5.2.2 Key functions	40
5.2.3 Switching on the controller	41
5.2.4 Menu structure	41
5.3 Menu descriptions	43

5.3.1	Main menu	43
5.3.2	SPEED menu	44
5.3.3	SPEED CURVE menu	46
5.3.4	START/STOP menu	49
5.3.5	DRIVE menu	50
5.3.6	INTERFACES menu	52
5.3.7	OPERATING PARAMETERS menu	54
5.3.8	CONTROLLER PARAMETERS menu	55
5.4	MONITOR menu description	56
5.4.1	MONITOR 1	56
5.4.2	MONITOR 2	57
5.4.3	MONITOR 3	57
5.4.4	MONITOR 4	57
5.5	Fault memory description	57
 6 Putting into operation		 59
6.1	Preparations	60
6.1.1	Summary of installation instructions	60
6.1.2	Checking the installation	61
6.2	Entry of main data	62
6.2.1	Switching on the controller	62
6.2.2	Entering the motor parameters	62
6.2.3	Entering inspection speed	62
6.2.4	Inspection run	63
6.3	Normal run start-up	63
6.3.1	Test run	63
6.3.2	Calibration run	63
6.3.3	Setting the stopping accuracy	64
6.3.4	Checking the braking path	64
6.3.5	Checking the stopping accuracy	64
6.3.6	Starting behaviour	65
6.4	Inspection run	65
6.5	Setting V2 and V3	65
6.6	Direct run-in	66
 7 Description of Faults		 67
7.1	Fault diagnosis	68
7.1.1	LED indicators	68
7.1.2	Display messages	68
7.1.3	Unexpected running characteristics	75
7.1.4	Controller faults	76
7.2	Replacement of EPROMS	76
7.3	Servicing and spare parts	77
 8 Product liability and warranty		 78
 9 General Terms of Trade MICOTROL International GmbH		 79

1 About this Manual

For your safety:

This Operating Manual uses three types of alert messages to call your attention to important facts:



DANGER: A danger warning describes a procedure or status that may lead to hazardous or even fatally dangerous consequences for the user or lift passenger.



CAUTION: This type of message indicates operations which may damage the controller, the control system or the drive. However, any such damage may lead to injury or death (e.g. in case of fire).

PLEASE NOTE: This type of message contains information about specific work steps. It explains facts, defines terms or provides tips on how to simplify a procedure or an operating sequence.

Please observe the following safety notes!

Although the Mcomfort controller has been developed for your protection in compliance with all safety measures, it is not possible to exclude faults. In the interest of your own safety and that of your colleagues please note the following instructions:



DANGER: Sharp edges and sensitive components! When carrying equipment without packaging, hold the side elements. Gripping under circuit boards or metal panels can cause damage to the equipment and injury to yourself.



DANGER: Risk of crushing and damage to the controller if it does not have a firm stand. Be sure to place the controller on a flat surface which can support its weight before installation! Do not stand the controller on end as it could fall over.



DANGER: When mains power is applied, the inside of the controller and its external terminals will be under high voltage. Touching live components can be fatal! Before switching on the power supply, make sure that the front panel of the controller is screwed in properly! Never poke inside the controller through the bottom or top with long objects (pliers, screwdrivers ...) during operation (power on)!



DANGER: *Fatally dangerous high voltage even after switching off mains power! Different components inside the controller and the braking resistor are under high voltage for approximately five minutes after disconnection from mains power. Only open the cover after these five minutes have elapsed. Never operate the controller with the cover open!*



DANGER: *After prolonged use, the controller heat sinks will reach a maximum temperature of 70°C. Touching them with bare hands can be painful, particularly after opening the front panel or by reaching behind the top edge. Allow the unit to cool before you get near the heat sink!*



CAUTION: *The controller generates waste heat during operation which must be removed from the control cabinet. In case of insufficient cooling, the controller's surroundings may overheat and under adverse conditions this can result in ignition. When you plan the cabinet and install the controller, make sure that the heat is adequately removed, particularly for operation during the summer!*

Alert messages

You have already read how we indicate safety notes. If not, please do so now. We do not want you to endanger yourself or others because you were not aware of the risks involved in handling these controllers!

As you read through the operating manual, you will find the following symbols:
A dot indicates an item in a lists of properties or a status.

- ▶ A arrow indicates that you should check something or read a summary.
- ! Exclamation-mark indicates operating steps which you must carry out yourself.
- ? Question-mark your attention to a specific display, but there is no need for you to set anything.

Mcomfort Controllers

© 2005 MICOTROL International GmbH

COPYRIGHT

The Mcomfort series controllers and this operating manual are protected by copyright. Imitation of these units will be prosecuted. All rights to the operating manual, including the rights of reproduction in any conceivable form, be it by photocopying, printing or recording on data carriers, and including translations, are reserved. This operating manual or parts thereof may not be reprinted without the express written permission of MICOTROL.

This operating manual describes the product as exactly as possible but gives no guarantee for any specific characteristics or its success in use. The operating manual was checked carefully prior to publication. The authors give a warranty that the operating manual contains no errors which make it useless or detracts from their usefulness for the unit's implied use. However, the publisher does not accept any liability, neither expressly nor implicitly, for damage or consequential damage resulting from the use of the operating manual. We shall be grateful for all corrections, suggestions and criticism!

The state of technology at the time of the joint dispatch of product and operating manual by MICOTROL shall be decisive, unless otherwise stated. Technical modifications are subject to change without prior notice; previous operating manuals become invalid. The General Terms of Business of MICOTROL shall apply.

MICOTROL International GmbH

Daimlerstraße 6

D-63755 Alzenau

Tel. +49 (0) 60 23 - 50 56 **80**

Fax +49 (0) 60 23 – 50 56 **99**

Alzenau, 01. November 2005

2 Description of the unit

2.1 Application and definition

2.2 Functions and features

2.3 Basic design

2.4 Schematic lift run

Chapter overview:

This chapter introduces you to the basics of the [Mcomfort](#) controllers and to their use in comfort lifts. Read this chapter if you want to learn more about the technology of MICOTROL lift controllers and their integration in the control system.

2.1 Application and definitions

Area of application

The Mcomfort series of controllers consists of phase control frequency converters for lift drives with exceptionally high running comfort. The controllers are designed to control variable speed asynchronous lift motors in conjunction with a braking resistor, digital encoder (pulse generator) and a higher-level control system.

The Mcomfort controller product line and accessories are designed for electrical speed regulation, drive and positioning of three phase asynchronous motors. Areas of application are:

- Passenger lifts
- Material and load lifts
- Drives in crane facilities
- Drives in high-bay stores

These are the only applications; the controller is not designed for other reasons. Especially not for high dynamic drives, with precision positioning systems except the shown ones.

Definitions

Conveying systems: Passenger lifts, material and load lifts, crane facilities, high-bay stores. The controllers can be used on lifting and travelling gear.

Three-phase asynchronous motors: The controllers are suited for two motor types:

- variable squirrel-cage motors with a torque characteristic for electronic speed controllers with voltage dosing (like MICOMPACT 330) or
- similar standard motors of all types designed and built for speed control through frequency converters.

Radio interference suppression:

Without a radio interference filter at the power input, and if the installation instructions in Chapter 3.4.3 are not observed, neither level EN55011/55022 Class B will be attained!

PLEASE NOTE: *The operator of the overall system is responsible for observing the postal regulations in force at his location as well as for the interpretation and observance of accident prevention regulations and compliance with all pertinent standards and statutes.*

2.2 Functions and features

Connection to higher-level Controller

The Mcomfort series controller can receive commands from special higher-level controllers and send back status information over a serial link. The parameter adjustments can be made with a LC-Display and keypad; alternatively a PC and the MICOTROL-Software (Micoview) could be used.

Additional Connectors (for details see Chapter 4, Interfaces)

For best operation issues an appropriate incremental encoder has to be connected. The main supply has to be made with three-phase voltage. A motor temperature sensor has to be connected to the Inverter.

The main features and functions:

- The Mcomfort series: Efficient vector-regulated transistor pulse-controlled AC converter with high running comfort and best stopping precision. For supplying power to single speed standard asynchronous machines or polarity-reversing lift motors.
- Range of nominal current: 15A to 100A
- Mains connection: 50 or 60Hz, available for various mains voltages.
- Power pack: IGBT module for cycle frequencies up to 16kHz, very low noise levels. Earth fault and short-circuit proof.
- Radio-suppression: Integrated radio-interference filter (15 to 50A units).
- Control section: Fully digitised, thus high and lasting control accuracy.
- Controller set-up: Via menu structure with four-key navigation; all status signals via LCD (liquid crystal display).
- PC control system (optional): All controller settings can also be entered via an IBM-compatible PC instead of using the four-key pad and LCD; the PC is connected to the controller via a standard RS-232 interface. Password-based locking as well as online display of the running curve (set-point and actual value curve).
- MICOBUS control system (optional): LS2/LS3, DCP3, DCP4
- Automatic determination of braking path.
- Six different operating speeds.
- Six output relays with floating contacts; the user can allocate one contact with different functions.
- Monitoring and safety functions: Motor temperature monitoring, encoder monitoring, heat sink temperature monitoring, short-circuiting and earth-circuiting monitoring.

- Direct running-in subject to appropriately accurate well information.
- Four quadrant operation: No direction contactors necessary.

2.3 Basic design

The Mcomfort series, power circuit

The speed of the three-phase motor is varied by the indirect voltage converter and controlled through the evaluation of an actual speed signal (encoder signal). The motor may be either a regulated special motor generally used in lift technology or a standard variable speed motor. The main supply for the power circuit (IGBT modules) is a three-phase supply through the radio-suppression filter and a non-controlled mains rectifier in the intermediate circuit. Only the active power is taken from the mains network. The mains power supply for the electronics and the recharging of the intermediate circuit is done through a three-phase supply on the controller board. The required torque for the motor is gained through pulse width modulation from the constant intermediate voltage. The sinusoidal current and the frequency are varied according to the required torque. Frequency and voltage are reduced for the braking operation and the motor feeds generator energy back to the intermediate circuit and the brake resistor.

Control section

The control design is based on an ideal lift run curve, taking passenger sensations into account. Ramp-up is time dependent; ramp-down is travel dependent. Halting is controlled down to drive speed ZERO. Thus the mechanical brake only has a retention and safety function and is not subjected to wear. Driving and braking are controlled by a specified speed program derived from the ideal run curve for passengers' sensation of acceleration.

The complete control layout in digital technology with two micro-controllers enables maximum support from the controller's operating software during commissioning. The controller calculates the essential lift and operating parameters itself and saves them permanently in an internal memory.

2.4 Schematic lift run

This section gives a step-by-step description of a typical passenger lift run using a Mcomfort controller (see Figure 1).

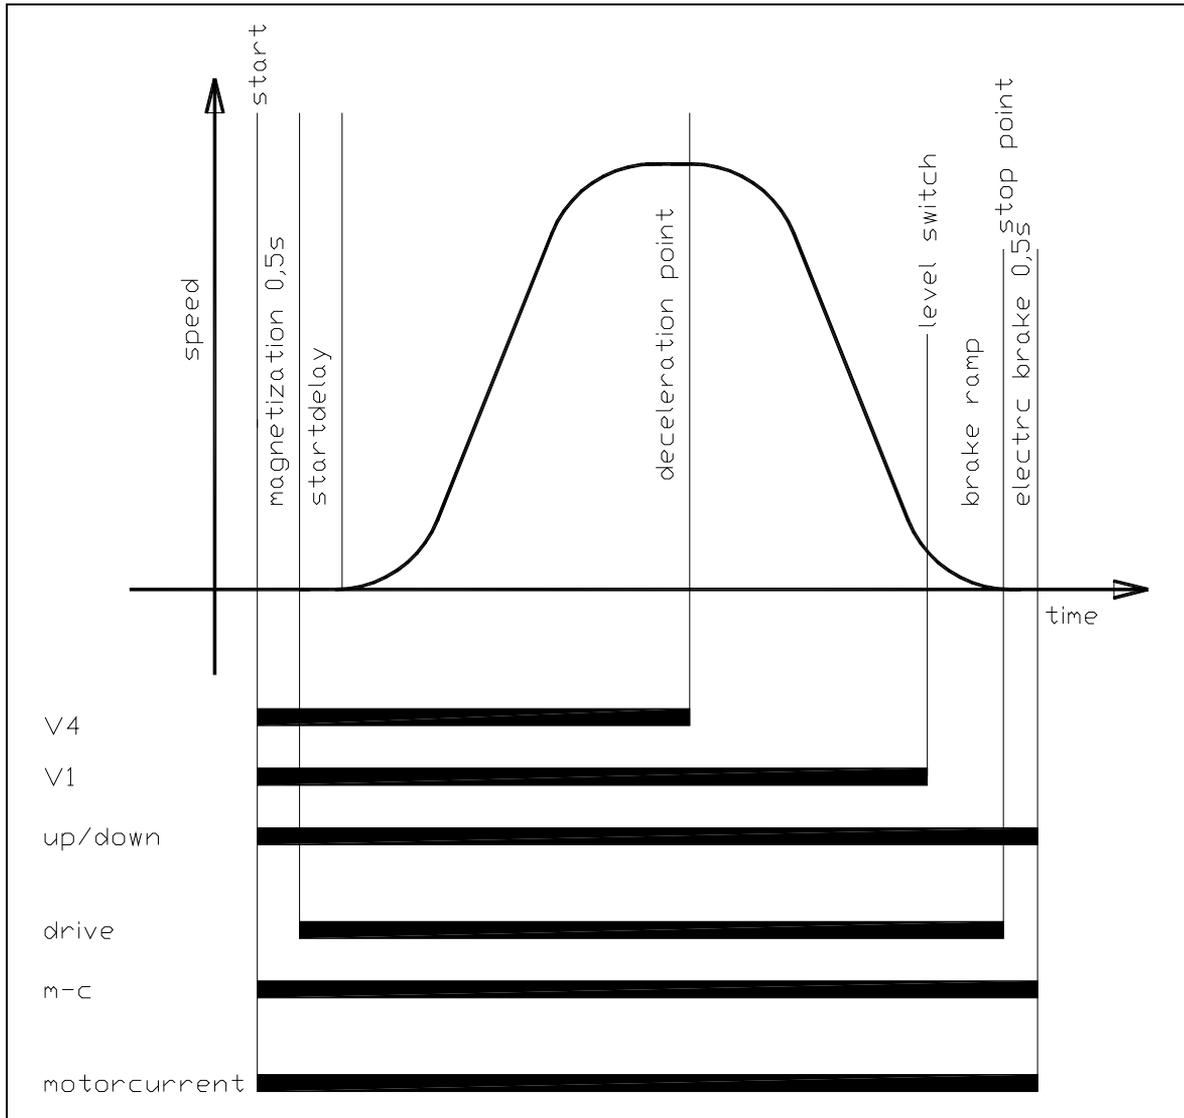


Figure 1: Curve of a typical lift run, showing the control signals and switching points.

The significance of the different speeds and the inputs and outputs are described in greater detail in Chapter 4 of this operating manual.

Sequence on an inspection run

On start-up the control system sends the controller the following commands:

- the travel direction UP or DOWN,
- The inspection positioning speed V_i and
- if necessary the run-in speed V_1 .

The controller provides the following signals to the control system via floating relay contacts:

- switch on main contactor (CONTACTOR relay) and
- clear mechanical brake (DRIVE relay).

The controller controls the motor torque dependent on the load. The drive accelerates to the set-point value of the stipulated inspection or normal run-in speed.

When the inspection speed is stopped, the main contactor and the mechanical brake are switched off by the control system (brake is applied).

PLEASE NOTE: The UP or DOWN command must be switched off at the same time as the main contactor is switched off. Only then is the controller output blocked. Otherwise the controller sends an error message: ERROR-11: "int. under voltage" or ERROR-13: "contactor travel"!

Sequence on a normal run

Start

On start-up the control system sends the controller the following commands:

- run direction UP or DOWN,
- desired end speed V2, V3 or V4, or
- run-in speed V1.

The controller provides the following signals to the control system through the relay contacts:

- switch on main contactor (CONTACTOR relay) and
- release mechanical brake (DRIVE relay) with 0.5 second delay.

The controller regulates the torque of the motor dependent on load. The drive accelerates to the set-point value of the stipulated constant speed.

Acceleration

Normally the cabin is set in motion quickly and without jolting. Acceleration is increased according to the run's program and is reduced prior to transition into end speed. The transition form can be set through the jolt-acceleration (round-off factor).

Deceleration


The control system switches off the fast run command V2, V3 or V4 at the deceleration point. From the calibration run conducted during first-time operation, the travel calculator in the controller knows the distance left to the levelling switch. Using this data, it continuously calculates the last moment at which the deceleration phase must be initiated to arrive reliably at level stop position. It is not until this moment is reached, that the lift slows down to run-in speed V1 as determined by the distance calculator. Upon reaching the levelling flag (about 4 to 10 cm before the stop) the control system cuts out the run-in speed V1 and the drive decelerates down to the ZERO speed, stops the motor electrically and allows the run relay to drop out at which point the brake is applied.

The contactor relay breaks with a delay of 0.5 s. During this time the motor is still held electrically until the mechanical brake has been safely applied .

For the electric stop function, the motor also needs current. Therefore the main contactor and the direction signal UP or DOWN must remain switched on after the level signal has been given. If the main contactor is switched off when the standstill signal is given, the drive could start up again after stopping until the mechanical brake has been applied. The controller controls the delay time up to the moment when the main contactor drops out; the main contactor is connected directly to the CONTACTOR output relay.

Sequence on a POINTED-CURVE run

A pointed-curve run is a travel curve in which the specified end speed is not yet reached at the deceleration point (by well switch). In this case, while the run is still increasing in speed, the controller calculates the point in time (point on the path) at which the braking phase must actually be introduced in order to reach the destination floor at run-in speed (see Figure 2).

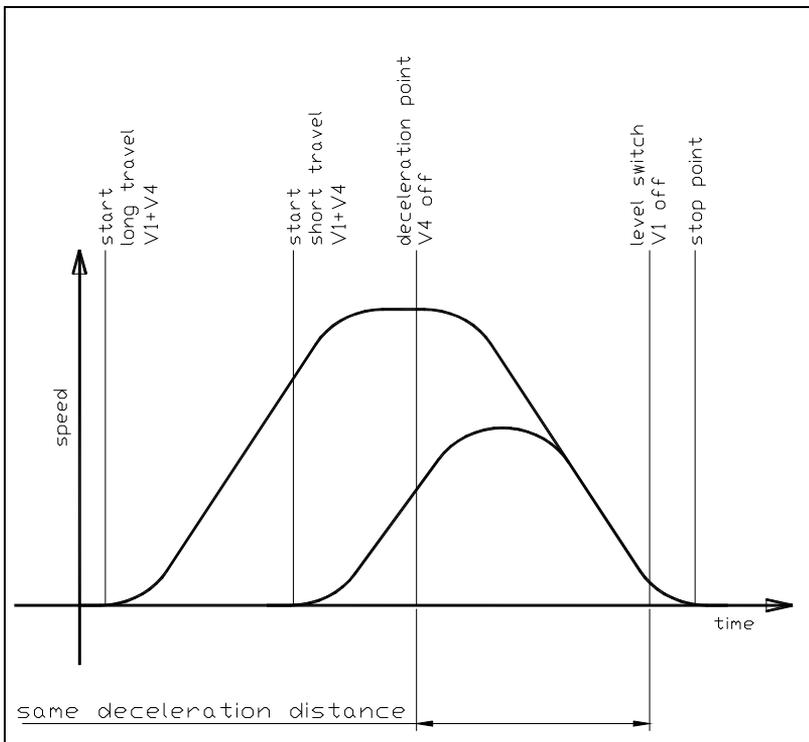

Applications are floor-to-floor runs at high end speed and offset floors. The shortest possible run time is then achieved because the lift continues to accelerate after passing the well switch.

Figure 2: Travel sequence on a pointed-curve run (see text).

3 Unit design

- 3.1 Selecting the proper controller
- 3.2 Power classes and type codes
- 3.3 Operating conditions
- 3.4 Installation notes
 - 3.4.1 General notes and safety precautions
 - 3.4.2 Installation in the Control Cabinet
 - 3.4.3 Noise suppression
 - 3.4.4 Fusing
- 3.5 Safety features

Chapter overview:

This chapter contains important information on the controller product line, on the selection of the best suited Mcomfort controller, on installation preliminaries and on the operating conditions.

3.1 Selecting the proper controller

Depending on your application and requirements, determine the following main variables for your order:

- ! Mains voltage.
- ! Nominal motor current.
- ! Nominal controller current: Must be equal to or greater than the nominal motor current.
- ! Older motors where the flywheel mass can't be reduced take the next higher controller with more power.
- ! Control voltage: Depends on the lift control system and must be agreed upon with the control system manufacturer.
- ! Digital encoder: Key data: 1,024 to 4,096 pulses/revolution, push-pull HTL (high-threshold logic) level, operating voltage 10 to 30VDC, max. load 100mA.
- ! Digital encoder: TTL (transistor-transistor logic) level, 4 channels, operating voltage 5VDC, max. 180mA.
- ! Brake resistor: See Chapter 4.6.



ATTENTION: To use ready-made encoder wiring with Sub-D connectors please specify the encoder type in your order.

3.2 Power classes and type codes

- The controllers are available in the sizes given below (see Figure 3). Higher power classes on request.
- Mains voltages of 400V three-phase current or as required, mains frequency 50/60Hz.
- Control voltages as required, AC or DC.
- Power classes

Nominal Current [A]	Current Limiting [A]	Main Fuse NH [A]	Power Dissipation appr. [W]
15	22,5	25	350
25	37,5	40	500
50	75	80	1000
75	112,5	125	1500
100	150	160	2000

Table 1: Table on performance data and maximum heat development on nominal controller ratings

- Modulation frequency: set to 16kHz
- Radio interference suppression: standard EN 55011, EN 55022, VDE 0875 B. Motor and break resistor wiring must be shielded (see Chapter 3.4).
- Housing protection: IP21



CAUTION: The controller emits waste heat via the heat sink during operation. The permissible control cabinet temperatures may be exceeded as the result. Be sure to consider the controller's heat output when determining the size of the control cabinet's exhaust air system and cooler! A frequency controller dissipates about three times the heat loss of a thyristor controller!

3.3 Operating conditions

The controller complies with the relevant DIN and VDE standards and applicable to units of this type.

This chapter describes units designed for operation in lifts and other conveying systems.

Electric power and constant load

- The start-up current may reach the set limit level for a maximum period of 10 seconds.
- The mains power supply tolerance is +10/-15%.
- A maximum 240 runs per hour are permitted for lift and automated warehousing applications at an ambient temperature of less than 45°C. The controller switches off automatically should a limit temperature be exceeded by the motor and/or controller.
- PLEASE NOTE: Start-up current: Normally the controller limits the maximum start-up current to 2 times the nominal current of the motor (standard). However it must be determined whether this is sufficient for the specific application. It may be nec-

essary to consult the motor manufacturer. If a higher start-up current should be necessary, a frequency converter with a higher rating may be need to be selected.
Operating temperature

The units are designed in accordance with DIN/VDE 0558 for an ambient temperature (in this case: control cabinet temperature) of 45°C. If higher temperatures are specified, it may be possible to use a controller in a higher nominal power class from case to case. This alternative must always be clarified in advance with MICOTROL!

3.4 Installation

3.4.1 General notes and safety precautions



DANGER: During controller operation, certain parts of the unit are inherently under dangerous high voltage. Appropriate precautions must be taken when installing the unit in the control cabinet, especially separate covers for live parts. **IMPORTANT:** Even after the controller system has been switched off, some components within the system and the brake resistor remain under high voltage for about five minutes.

- ▶ Be sure to mount the lower metal cover before switching on the mains supply. All adjustment procedures can be carried out with the unit closed!
- ▶ Be sure to observe the pertinent regulations and guidelines of your power supply company. Also be sure to follow the relevant installation guidelines for the site by the plant operator as well as the applicable accident prevention regulations.
- ▶ Only qualified technicians (electricians or persons with electrical engineering training) are allowed to carry out the installation work.
- ▶ Shock protection precautions must be taken before carrying out adjusting and servicing tasks while the mains supply is switched on (VDE 0680).
- ▶ The unit meets VBG4 requirements in ready-to-use condition.
- ▶ Be sure to observe the pertinent VDE and DIN standards, especially VDE 0105 and DIN EN 60204-1 and DIN 57105, during installation and when working on the plant.
- ▶ Electrical connections for the motor, control system and controller must be made in accordance with the appropriate terminal diagrams and with due consideration to the pertinent VDE regulations and the guidelines of your local electric power supply company.

3.4.2 Installation in the Control Cabinet

- ! Controllers of the Mcomfort series are designed for vertical installation in cabinets or machine frames. They must be fitted with their terminal strips and connecting bars to the bottom. See Figure 3 and 4 for dimensions.

- ! Make sure that the cooling air intake and discharge are not restricted in any way. To ensure this allow a gap of at least 100mm above and underneath the unit. Permissible ambient temperature within the cabinet is 45°C (also see Chapter 3.3).

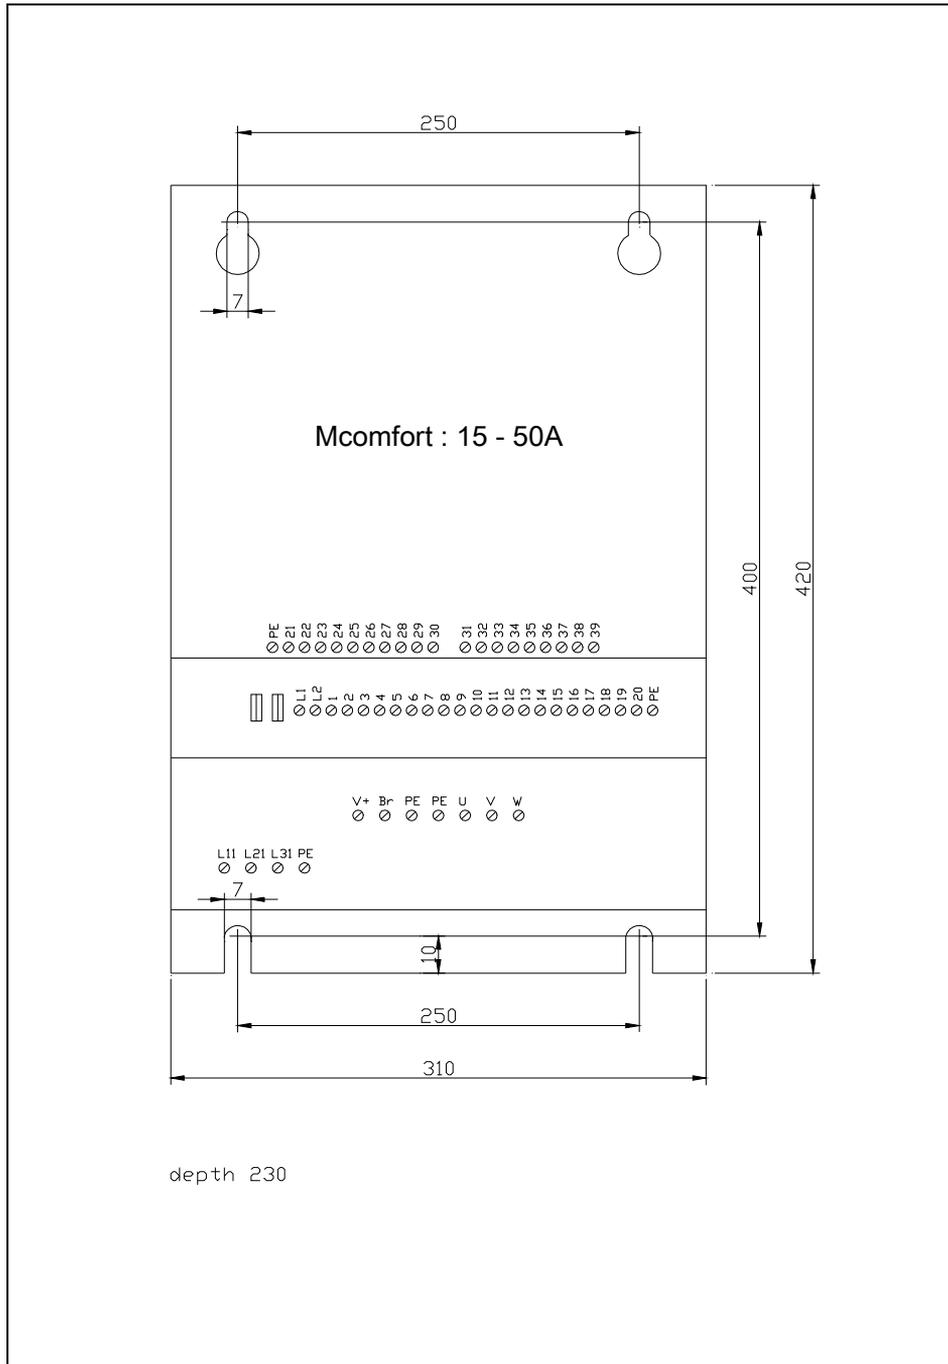


Figure 3: Dimension drawing for units with 15A to 50A rated current

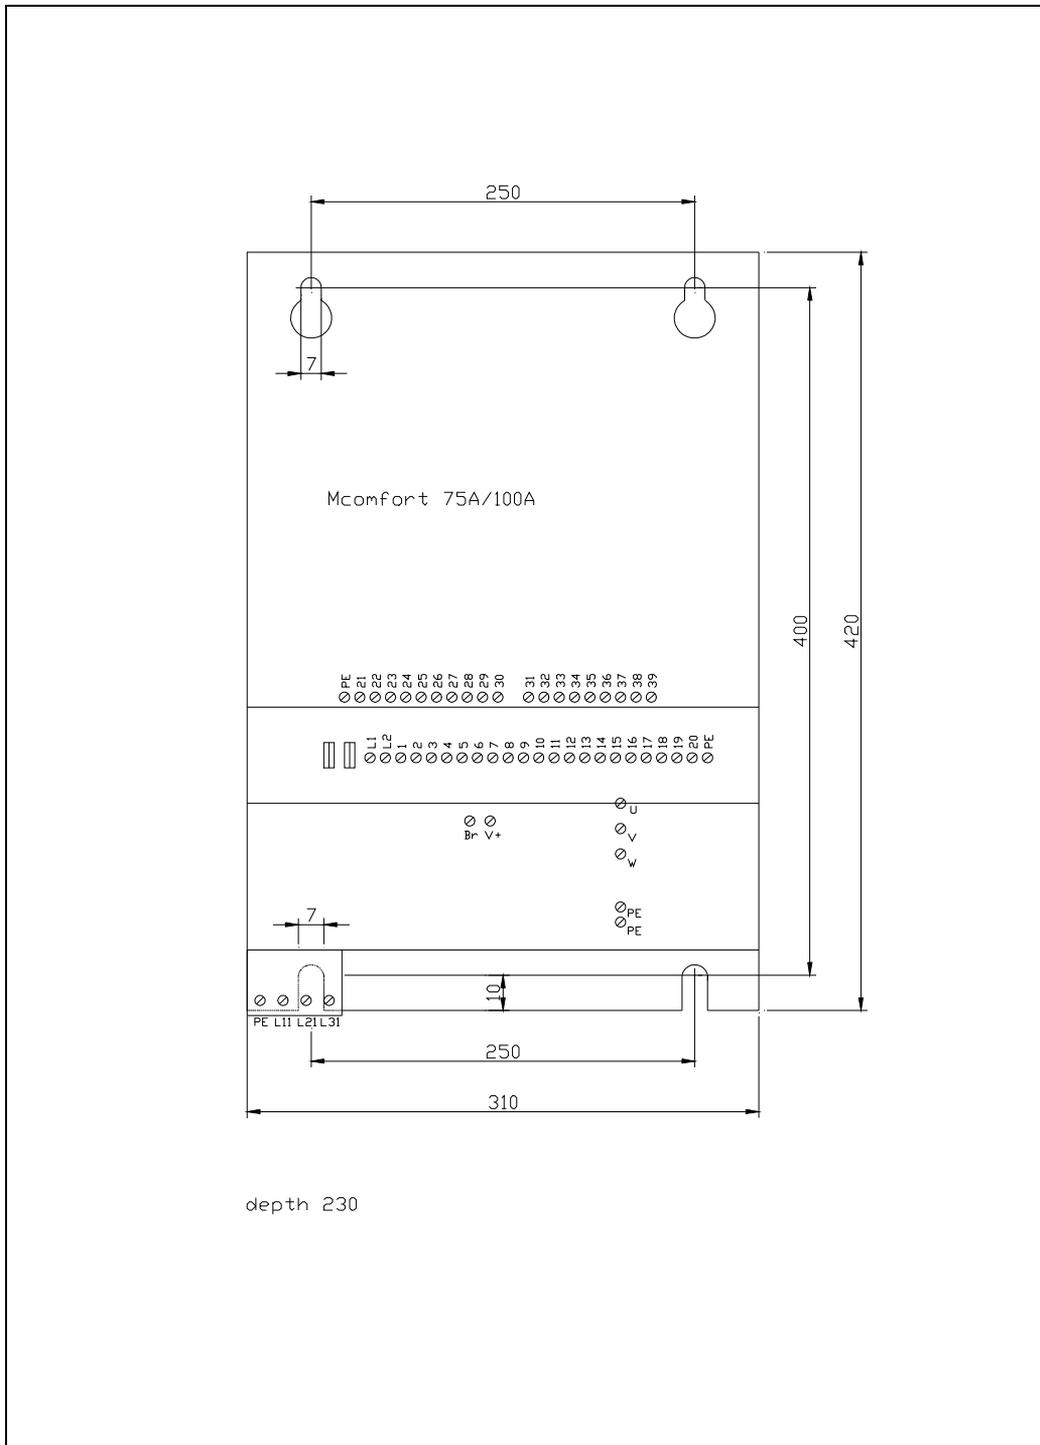


Figure 4: Dimension drawing for units with 75A to 100A rated current

- ! Note the controller heat loss capacity! The switch cabinet must be designed and built so as to ensure effective heat dissipation.
- ! We recommend the use of separately driven fans in the switch cabinet for ventilation purposes. Such fans should be supplied with filters to avoid contamination of the controller.

3.4.3 Noise suppression

This section describes the necessary measures for radio-interference suppression as required by law and EMC (electromagnetic compatibility) regulations.

Radio suppression

Radio suppression level EN55011/55022 Class B is attained. This corresponds to an interference emission level admissible, for example, in residential areas, hospitals and office environments. A prerequisite for level N, however, is the integration of a radio-interference filter at the power input (15 to 50A internally, 75 to 100A externally) and the compliance with all installation instructions.

PLEASE NOTE: *Radio suppression level EN55011/55022 Class B can only be achieved when all installation requirements for the controller, its connections and all associated electrical components are observed!*

Noise filter

Without a radio interference suppression filter at the input, the required level of radio shielding according to EN 55011 Class B cannot be attained. Units of the 15 to 50A rated current series are equipped with an integrated radio interference suppression filter (standard); whereas for units of the 75 to 100A rated current series, the radio interference suppression filter must be implemented externally.

PLEASE NOTE: *This is true for all such converters available on the market!*

- ! Residual-current (FI-type) circuit-breakers can be tripped inadvertently when power is switched on if a noise filter is being used. Only use residual-current circuit-breakers with a drop-out delay.
- ! Due to the high leakage current caused by the noise filter, the PE connection cable must have a cross section of at least 10 mm².

General installation notes

- ! The following controller installation instructions must be strictly observed; otherwise EMC (electromagnetic compatibility) cannot be guaranteed:
- ! The cable between the frequency converter and the motor/brake resistance must be shielded. Only use copper shielding; steel shielding is not suited here!
- ! The shielding of the motor supply cable and brake resistance cable must be applied on both sides over a large area from the cable clip on motor housing to the cable clip on the controller.
- ! Shielded leads must be used for encoders. The encoder shielding must be applied to both sides: on the motor side directly to the housing (PE), on the controller side to terminal 31 (capacitor for PE).
- ▶ Relays and contactors integrated in the same circuit must be equipped with spark-quenching combinations and over voltage protection components respectively. Suitable R-C combinations must be used for radio interference suppression of all contactors. This also applies to components which are not in the cabinet!
- ▶ Control and encoder leads must be laid separately to the load lines.

- ▶ Cable in the cabinet must be routed as close as possible to the reference potential. Dangling cables are prime EMC suspects due to their active and passive antenna effect.
- ▶ All metallic components in the cabinet must be connected with large contact areas and good HF conductivity. Beware of anodised oxide layers or yellow chromated coatings (on rails, screws, bolts etc.) which may have very high resistance values in certain frequency ranges! It is best to use an aluminium mounting plate in the cabinet.
- ▶ The system designer must consider HF noise generation as well as noise susceptibility among the converters and plan appropriate preventive measures.

Placement of the external noise filter

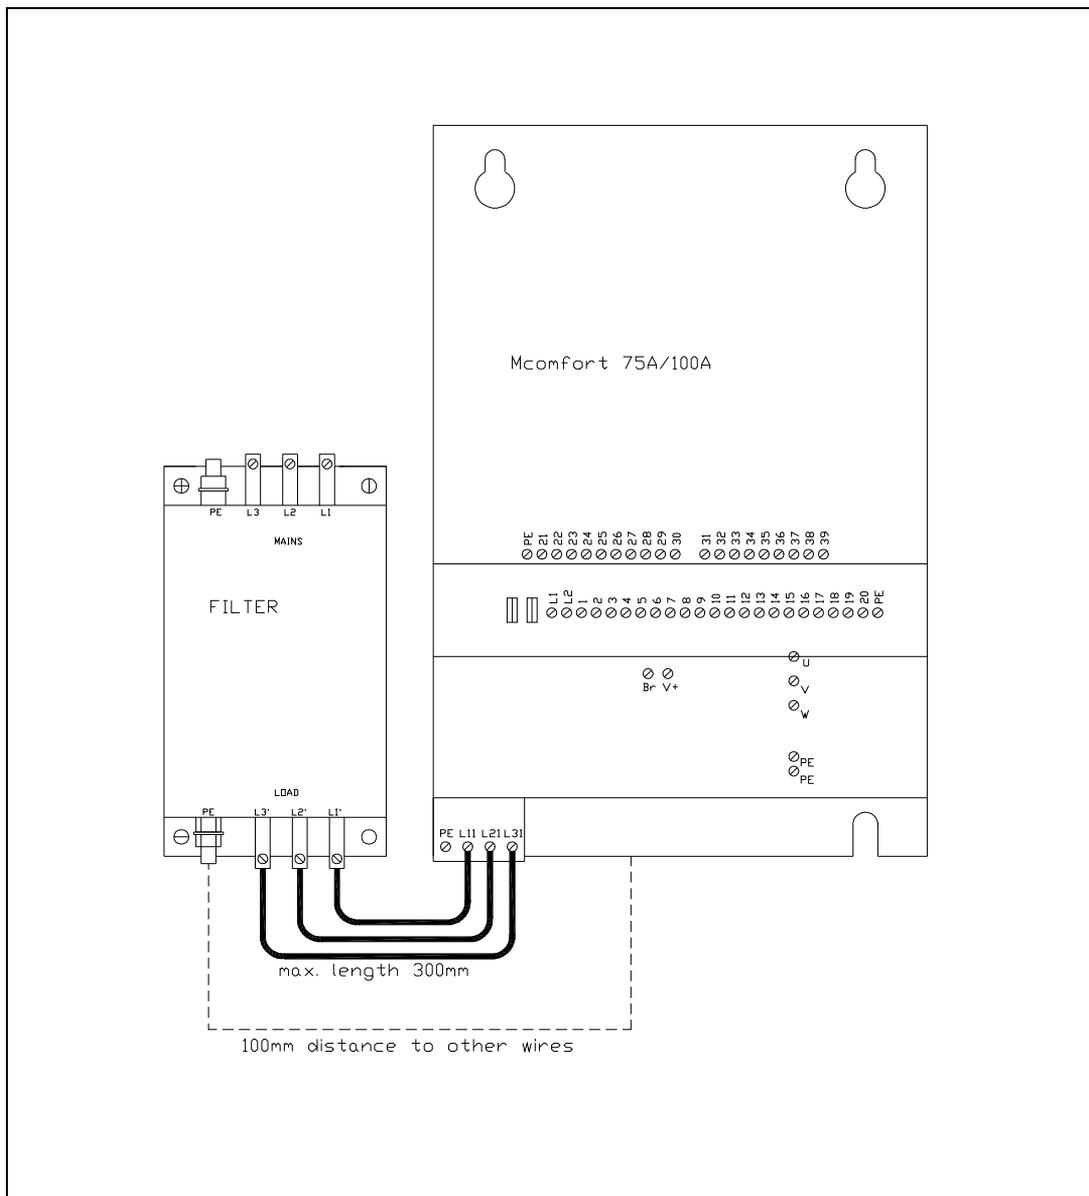


Figure 5: Placement of the external noise filter

PLEASE NOTE: Suitable shielding not only enables you to stay within the permissible radio interference level; it also protects the system itself, especially the digital circuits, against parasitic interference.

Noise filter types

In the following table you can see a list of noise filter types tested with the Mcomfort:

Nominal Current Mcomfort [A]	Noise Filter Type	Noise Filter Manufacturer
15	internal	---
25	internal	---
50	internal	---
75	NF80 FN351-80	EPA Schaffner
100	NF110 FN351-110	EPA Schaffner

Table 2: noise filter

Dimensions of the external noise filter

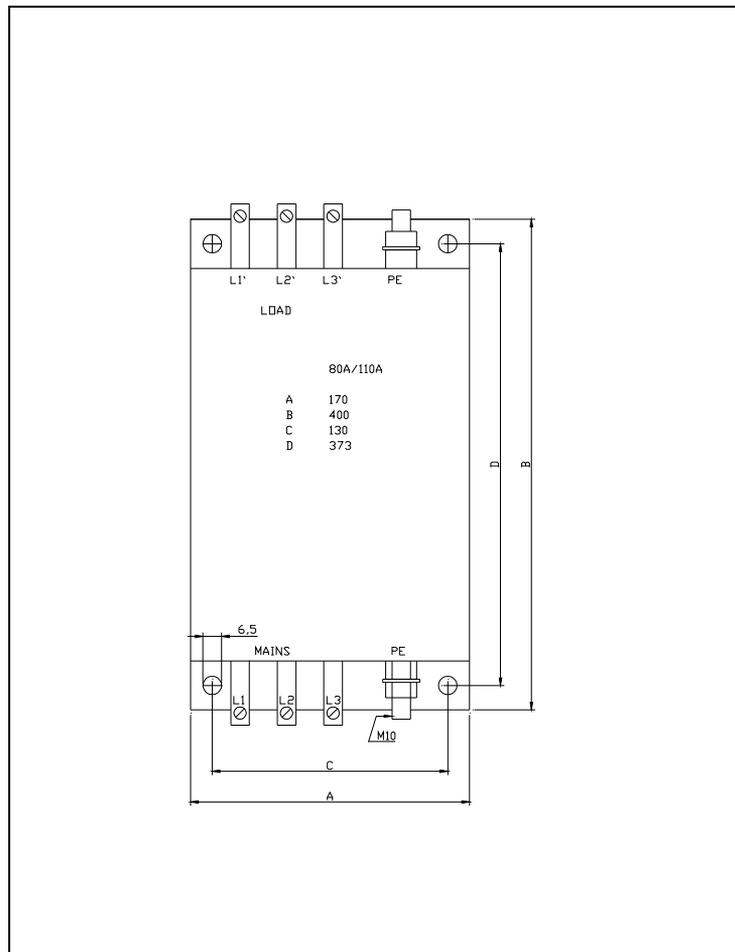


Figure 6: Dimension drawing of the external noise filter

3.4.4 Fusing

Low voltage HRC fuses are suitable for short-circuit protection for the power modules (see Figure-7)

3.5 Safety features

The controller design ensures that excitation of the MAINS, CONTACTOR and RUN relays is interrupted immediately in the event of a controller fault, even if the lift has not stopped, ensuring that the mechanical brake can be applied.

- If any faults occur in the control system or if the direction signal is lost, the output stages are switched off immediately and the mechanical brake is deactivated through loss of the RUN signal. Independently of this, the system ensures that the

power supply to the power circuit is switched off not later than 0.5s after the RUN relay drops out, causing the motor windings to be reenergized. If the encoder fails, or the deviation between set value and actual value for speed exceeds 10%, the controller will bring the cabin to a halt.

- If the heat sink temperature is too high, the circuit breaker will switch off the controller when the next stop position is reached.
- If the admissible motor temperature is exceeded (PTC thermistor evaluation), the drive will be brought to an immediate standstill.

PLEASE NOTE: *The controller is not a safety device as defined by lift regulations. The monitoring functions of the controller described above do not release the lift builder from his responsibility to observe the statutory safety regulations. The lift control system is the first level integrated in the safety chain.*

Disposal

MICOTROL will take back old units for handling-charge provided they are delivered carriage paid to the MICOTROL International GmbH factory in Alzenau, Germany.

Applicable local waste treatment and disposal regulations must be observed if you dispose of a unit yourself or replace any components. MICOTROL shall accept no liability for any parts and components that are not disposed of properly!

The following details are useful for disposal purposes:

- The controller's heat sink and side sections are made of aluminium, usually without lacquering or surface treatment.
- The front panel is made of printed aluminium sheet.
- Regulations on the disposal of electronic parts and components apply for the disposal of the main p.c. board, the LCD unit and the ignition protective circuit board.
- The power semiconductors contain no beryllium and can thus be disposed as electronics scrap.

4 Interfaces

4.1 Mains and motor connections

4.2 Encoder connection

4.3 Interfaces to the control system

4.3.1 Inputs in the controller

4.3.2 Outputs from the controller

4.4 Motor PTC thermistor

4.5 Fault memory

4.6 Brake resistor

4.6.1 Choice of brake resistor

4.6.2 Installation instructions

4.7 Shaft information

4.8 Serial interface

4.8.1 MICOBUS (optional)

4.8.2 Control system setting via PC

Chapter summary

This chapter contains all the details on the controller's connections. The information is important for installation and commissioning (see Chapters 5 and 6).

4.1 Mains and motor connections

Suitable drive motors

The controllers can be driven with two types of motor:

- Single-speed standard motor or similar standard motor without separate ventilation.
- Variable three-phase asynchronous motors used as special motors in non-controlled lifts or with thyristor controllers.



CAUTION: Increased voltage peaks occur at the motor when using long motor connection cables (more than 15m in length), which can reduce the service life of the windings. Only use motors for rate-of-rise-of-current values greater than 2 kV/ μ s or connect output throttles on the controller.

Centrifugal masses: Since the controller not only controls the entire drive train, but must also compensate short-term set-point fluctuations, it is best to dispense with additional centrifugal masses. The reduction of centrifugal masses results in a considerable saving in energy while significantly decreasing thermal loading for the motor. This also applies to the conversion of old systems in which the existing centrifugal mass should be replaced by a lightweight aluminium or plastic hand wheel (as far as this is permitted by statutory regulations). It is important that the motor is of low-noise design.

Mains and motor connections

Available mains voltages:

230VAC +10% / -15%

400VAC +10% / -15%

415VAC +10% / -15%

Other mains voltages upon request.

Please state required mains voltage when ordering.

- To ensure that the safety circuit is closed before the start of a run, the mains input to the controller board is connected in front of the main contactor. The mains input to the power section is connected behind the main contactor.



CAUTION: The converter will be destroyed, if the main contactor is not connected properly! Make absolutely sure that the inverter board (terminals L1, L2) is supplied with power before the main contactor is activated!

- Check the motor rating plate for star delta connection.
- Apply the cable shielding on the motor housing over a wide surface area (wrap-around contacting).

For connection details, see circuit diagram Figure 7:

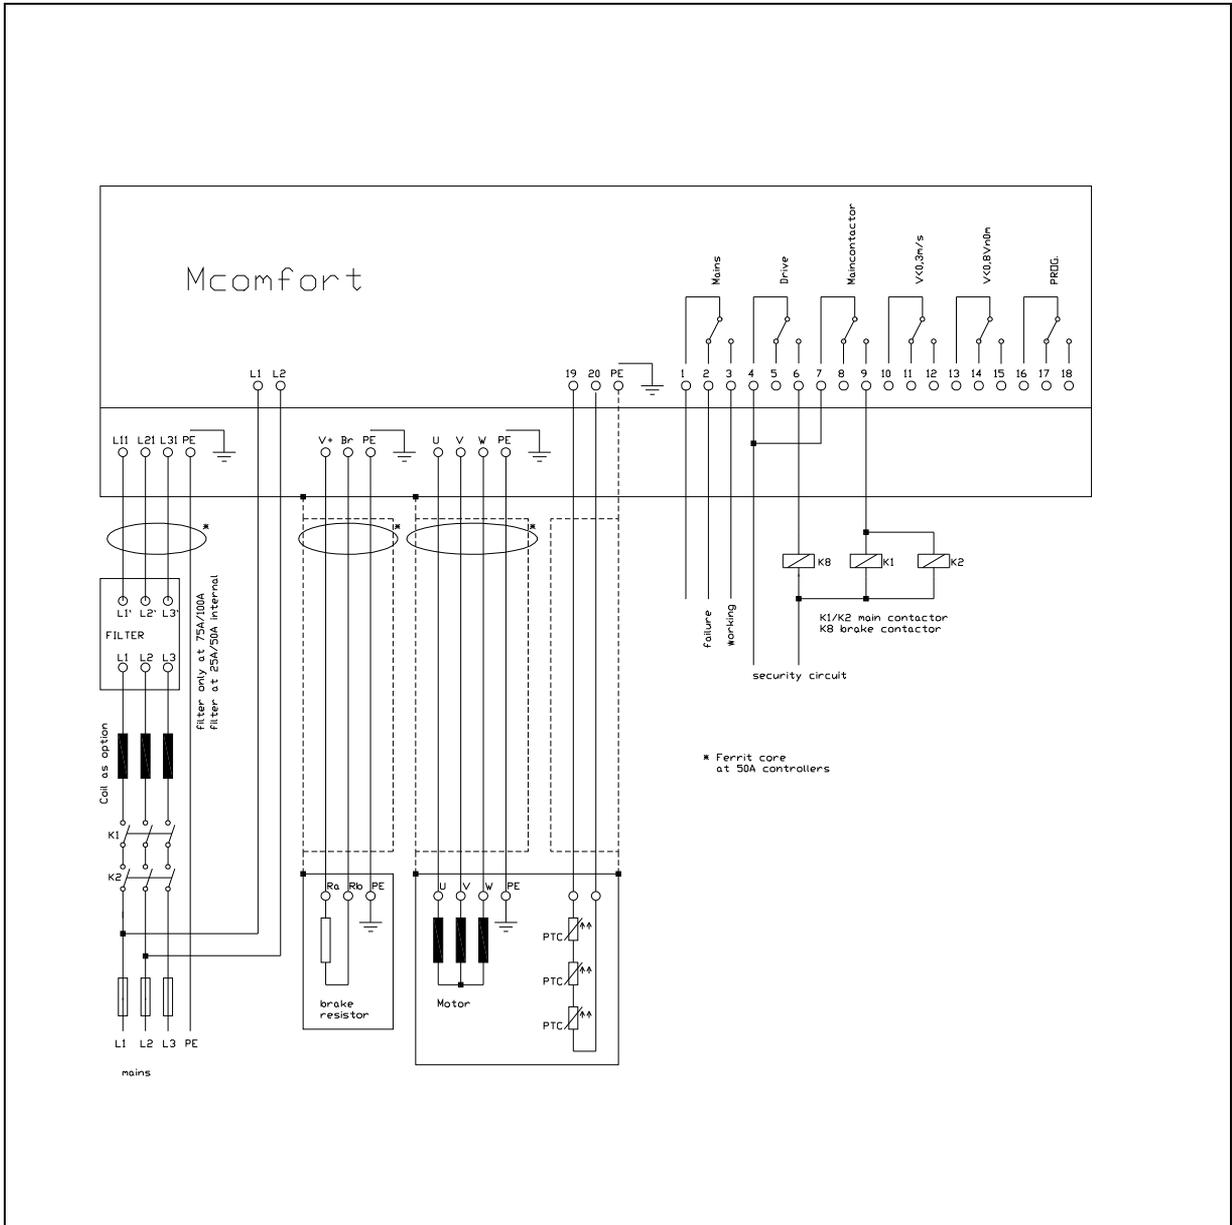


Figure 7: Circuit Diagram

4.2 Encoder connection

A motor encoder is required to scan the actual speed and calculate the distance of the run. The standard Mcomfort series controller is suited for use with digital encoders (incremental encoders).

PLEASE NOTE: *The higher the pulse rate from the digital speed scan, the better the control characteristic at low speed, especially in the start-up phase.*

Suitable digital encoders have two built-in pulse generators which supply 90°-offset pulses with perfect flanks.

The encoder must be connected directly to the motor shaft to prevent vibrations and blurred signals. Belt drives are less suitable. The controller supplies the operating voltage for the encoder electronics.

Digital encoders with HTL-level are connected to the regulator as shown in figure 9 to the terminals.

If a digital encoder with a RS422-interface is used, You can connect it to the regulator as shown in figure 9 to the terminals or You use a standard SUB-D-connector as shown in figure 8. If you use a standard SUB-D-connector you need to have a little code-card, which determines the pin out of the build in SUB-D-connector.

You need to order the code-card separately.

For the following types of encoders with RS422-interface and pre wired SUB-D-connector You can order a code-card:

Thyssen-encoder Typ HG90	code-card: Type HG90 THY
Ziehl-Abegg-encoder Typ ET2R	code-card: Type ET2R

- Operating voltage:
 - 10 to 30VDC (HTL level)
 - +15/0/-15VDC (HTL level)
 - 10 to 24VDC (HTL level)
 - 5V (TTL level)
- Current consumption: 180mA maximum.
- Pulse number: 1024 through 4096 pulses/revolution, two channels offset by 90°, tolerance +/-30°. Be sure to state encoder type when using a SUB-D input connector (SUB-D connector pin-outs are manufacturer specific).
- The cable shield must be connected to PE on the output side and to terminal 31 (PE) on the controller.

PLEASE NOTE: *The digital encoder used must be in perfect working order and under no circumstances may it transmit any pulses during standstill! The use of encoders other than those defined above need approval from MICOTROL.*

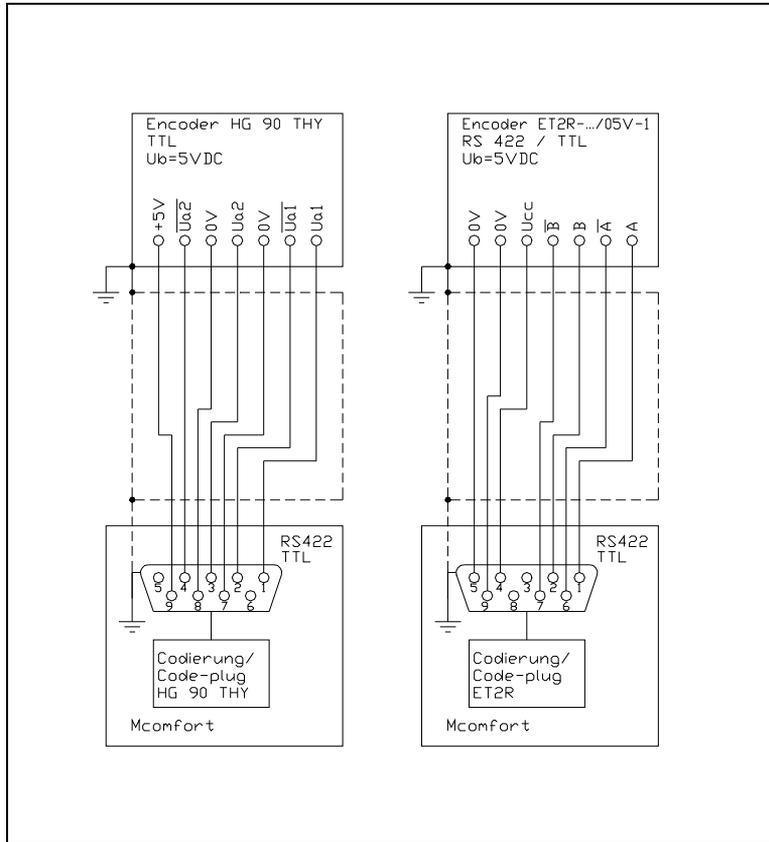


Figure 8: Tacho-generator connection TTL/RS-485 via sub-D connector

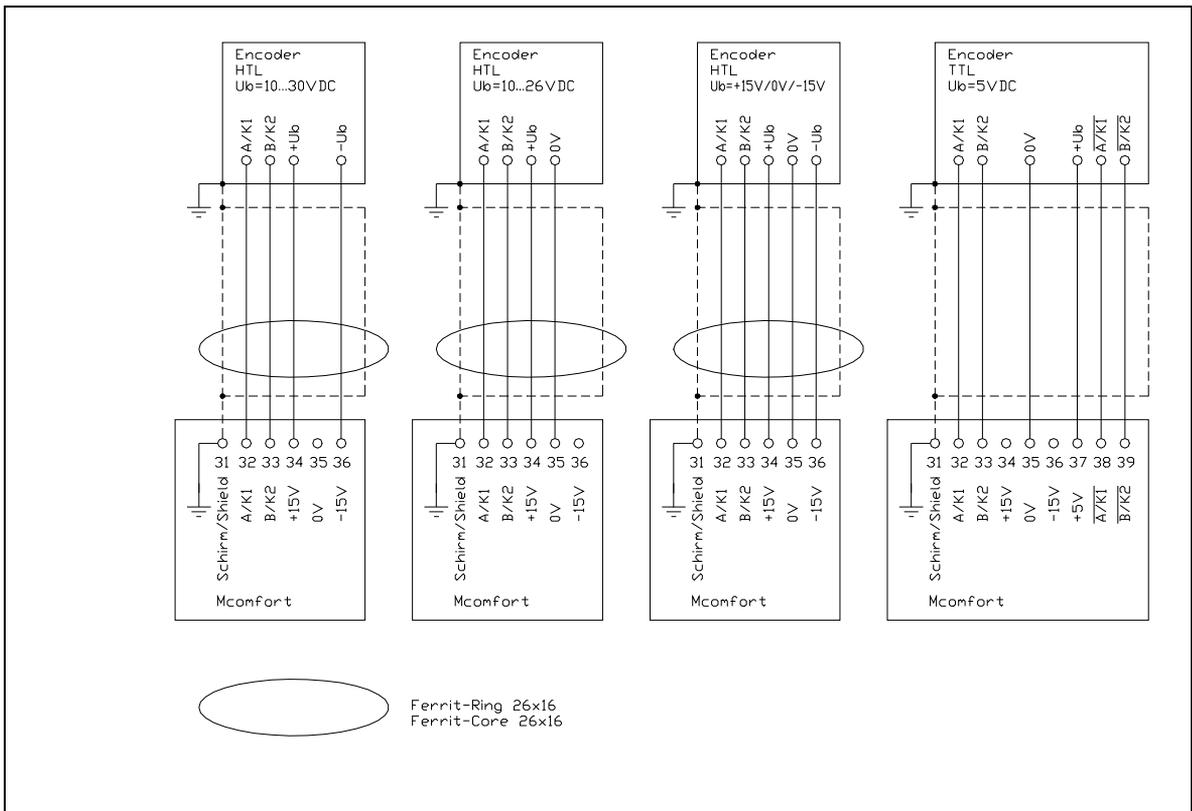


Figure 9: encoder connection via Phoenix terminals

4.3 Interfaces to the control system

4.3.1 Inputs in the controller

Control voltage

The control voltage of 20VDC is available on terminal 21 (only use for command signal input!). Input current approx. 10mA. Other control voltages (12 to 250V) are to be expressly stated when ordering.

All control voltage inputs are potentially isolated via optocouplers. The external DC control voltage must be smoothed (tolerance +/-20%).

! If command wiring exceeds 1,5m use shielded cable. Connect shield to PE terminal.

PLEASE NOTE: You must specify the command voltage when ordering the controller.

In the current controller version, communication signals between the controller and the control system are transmitted by conventional means via control voltages (24 to 220V, AC or DC). A separate line or separate controller connection via terminal strips must be provided for each signal (see Figure 10, terminal diagram).

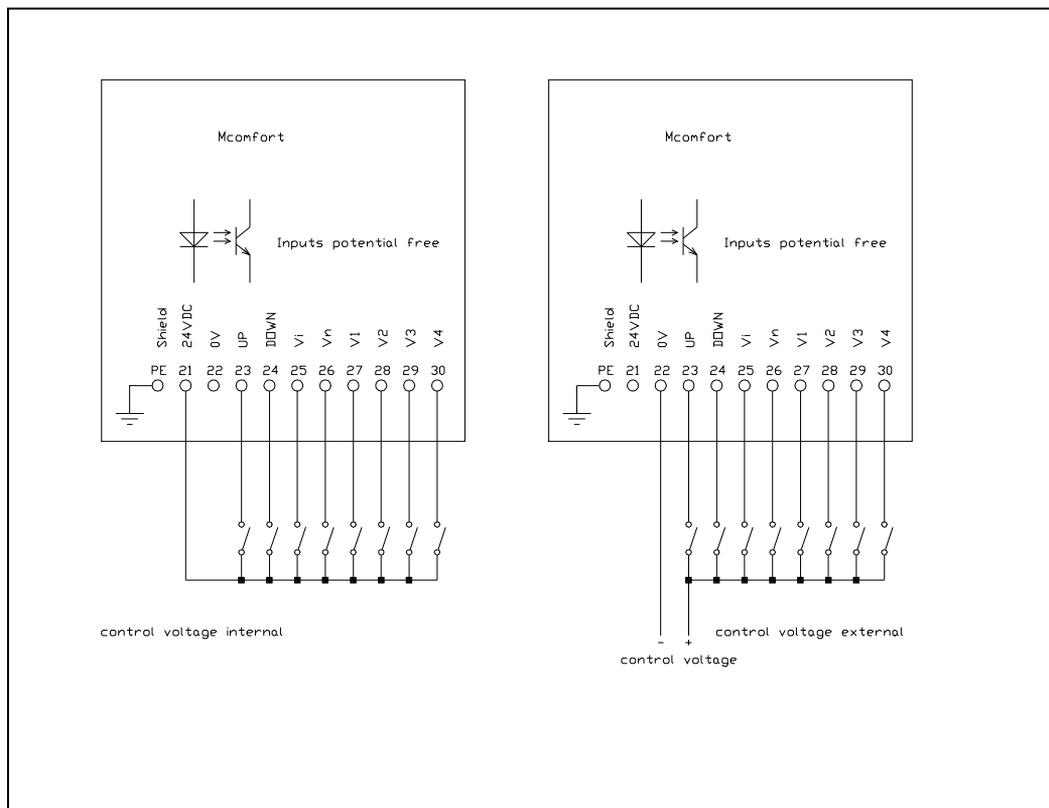


Figure 10: Terminal diagram

Drive commands

For an overview of the different input commands, see table 3:

Drive command	Description	Setting range (motor speed)	Terminal on controller
UP	Direction preselection/release	-	23
DOWN	Direction preselection/release	-	24
Vi	Inspection speed	10 to 1500 r.p.m.	25
Vn	Readjusting speed	0,5 to 100 r.p.m.	26
V1	Run-in speed	1 to 100 r.p.m.	27
V2	First speed	10 to 3000 r.p.m.	28
V3	Second speed	10 to 3000 r.p.m.	29
V4	Third speed	10 to 3000 r.p.m.	30

Table 3: Drive command inputs

The inputs in detail:

- The 0V connection is floating (potential-free).
- Adjustment speed Vn: This input is used for lifts with high elongation of the ropes, when levelling is no longer exact after the cabin has been unloaded. Example: goods lifts with 2:1 suspension and higher run height. The function requires an additional levelling flag that is shorter than that for V1 switch-off. Only connect Vn and direction command.
- Inspection speed Vi: A separately adjustable speed for inspection runs on the cabin roof and for returning the lift to its starting position. It is switched on and off with the direction (enable) command from the control system.
- Run-in speed V1: This is switched on upon start and switched off again when the levelling switch is reached. The controller reduces the speed to ZERO over the length of the levelling flag. V1 must be set to a level that allows the lift to stop in level position with unaltered brake ramp. When overrunning: Reduce V1. When stopping too early: Increase V1.
- The three different speeds V2, V3 and V4 are used if the deceleration paths (deceleration switch to levelling switch) are different in the well. If the deceleration paths in the well are different then only one of the three speeds is used.
- Direction UP or DOWN: the controller is activated by a run command *and* the direction command. The direction command may only be switched off again more than 0.5 seconds after the cabin has come to a standstill. The direction command must be switched off immediately with the run command on an inspection run; otherwise the controller will signal a fault! *If UP or DOWN is switched off, the controller will be immediately blocked and the drive stopped.*

PLEASE NOTE: The contactors and the mechanical brakes are switched off by the control system simultaneously with the desired value command on an inspection run. The deceleration ramp of the controller is interrupted when the controller recognises this as a fault. To prevent a fault signal, the direction command must be switched off within a period of less than 3 ms when switching off the inspection run..

4.3.2 Outputs from the controller

Six relays with floating changeover contacts are available as outputs. Each contact has a rating of between 24 VDC and 250 VAC at 3 A (see table 4):

Output relay	Designation	Terminals
MAINS	Centralised fault signal relay	1,2,3
DRIVE	Blocking the mechanical brake, TRAVEL-Signal	4,5,6
MAIN CONTACTOR	Interlocking main contactor	7,8,9
V<0,3 m/s	Interlocking for run-in with open doors	10,11,12
V<0,8	Interlocking a speed threshold, for example 80% of synchronous speed	13,14,15
PROG	Freely programmable relay for one of the following functions: - Motor temperature - Heat sink temperature - Overload, controller end stage - Speed threshold or 110 % of synchronous speed	16,17,18

Table 4: Output relays

PLEASE NOTE: Contacts, relays and printed conductors satisfy in shipped condition the requirements of insulation class C, pollution severity 3, for creep-, air- and isolating-distances. The spacing between the printed conductors MAINS - Rel., RUN - Rel. and H-S - Rel. is 4mm.

The outputs in detail:

- MAINS relay: A centralised fault signal relay. After the mains voltage has been connected to terminals L1, L2, L3 on the electronics board, the contact (terminals 1-3) makes. In a fault condition contact 1-2 makes (see table 5):

Faults	Display messages
Safety circuit interruption, fuse or phase failure during run	MAINS FAULT
Tacho wiring failure, tacho coupling fracture, blocked drive	TACHO FAILURE
Controller overload, deviation from actual/set value more or equal than 10%	DIFFERENCE SET VALUE
Motor temperature too high	MOTORTEMP.
Controller temperature too high	CONTROLLER TEMP.
Under or overvoltage, intermediate circuit	INTERMED.CIRCUIT VOLT.
Start-up in wrong direction	WRONG DIRECTION
Short circuit or earth connection	IGBT OVERCURRENT ÜBERSTROM U, V, W, B

Table 5: Causes for MAINS fault signal relay response

- **DRIVE relay:** Is activated when the command DIRECTION PRE-SELECTION + Vx (terminal 4-6) is given. It drops out when ZERO speed is reached or the direction command drops out (terminal 4-5). The DRIVE relay switches the mechanical brake (see Figure 7).
- **CONTACTOR relay:** Main contactor interlocking. The relay is activated, run speed Vx + direction command signal is given (terminals 7-9). The main contactors are switched on. The contactor relay is switched off, with 0.5 s delay upon reaching ZERO speed (terminal 7-8), see Figure 7.
- **V<03 relay:** Drops out when the speed of the cabin exceeds 0.3m/s (terminals 10-11) and is activated when the speed drops below this value (terminals 10-12). The speed threshold is variable. The relay can be used for interlocking during run-in with open doors.
- **V<0.8 relay:** Signals a speed threshold. If the speed increases above the threshold then the relay is deactivated (terminals 13-14). If the speed drops below the threshold the terminals 13-15 are made. This output is used in the case of shortened well heads where speed control is necessary after the highest and lowest deceleration point. Example: 50 cm after the highest deceleration point the speed must be <80% of nominal speed. If this is not the case an emergency halt is initiated with deactivated relay.
- **PROG relay (Terminals 16-17-18):** A user programmable relay with the following possible functions: V<Vx (adjustable speed threshold), OVERLOAD (controller overrides in drive or brake mode), excessive motor or controller temperature.

4.4 Motor thermistor

The thermistor monitoring system is designed for three thermo sensors switched in a row as per DIN 44082 (terminals 19, 20 on controller). They are triggered at a resistance value of 2.7 kOhm. The controller is locked and the MAINS relay drops out (terminal 1-2). The cable must be shielded with the shield applied to terminal PE (besides 19, 20) on the controller and to PE on the motor. The system is automatically reset after the motor has cooled down. If a separate unit monitors motor temperature, terminals 19, 20 must be bridged.

4.5 Fault memory

If the controller identifies a fault, the MAINS, DRIVE and CONTACTOR relays will drop out immediately and a fault message will appear in the display.

If all the run commands are switched off by the control system, the MAINS relay is re-activated and a new run can begin.

If, in the event of a malfunction, one or more run commands remain on after the fault message is issued by the MAINS relay, the fault message will be saved until the run commands are switched off.

The last 100 Faults will be saved in main menu ERROR.

4.6 Brake resistor

Energy is fed back into the controller intermediate circuit by the motor upon braking. As a result, the intermediate circuit voltage increases and the energy is cycled to a brake resistor when exceeding a voltage value of 650VDC (cycle frequency 16kHz).

4.6.1 Choice of brake resistor

Suitable brake resistors can be obtained from MICOTROL or selected using the following table:

Table 6: Choosing the appropriate braking resistor for worm and planetary gear systems:

Nominal Current Mcomfort [A]	Worm Gear System Value of Resistance/ Power of Resistance	Planetary Gear System Value of Resistance/ Power of Resistance	Wire [mm ²]
25	39Ω / 2kW	39Ω / 3kW	3 x 2,5
50	15Ω / 5kW	15Ω / 6,5kW	3 x 4,0
75	8,5Ω / 8kW	8Ω / 9kW	3 x 6,0
100	8Ω / 9kW	8Ω / 11kW	3 x 10,0

Type designation

Please state type according to the indicated key when ordering!
Further values and performances on request.

- Brake resistors supplied by MICOTROL have IP 20 types of enclosures.
- Cooling is by natural convection; a fan is generally not necessary.

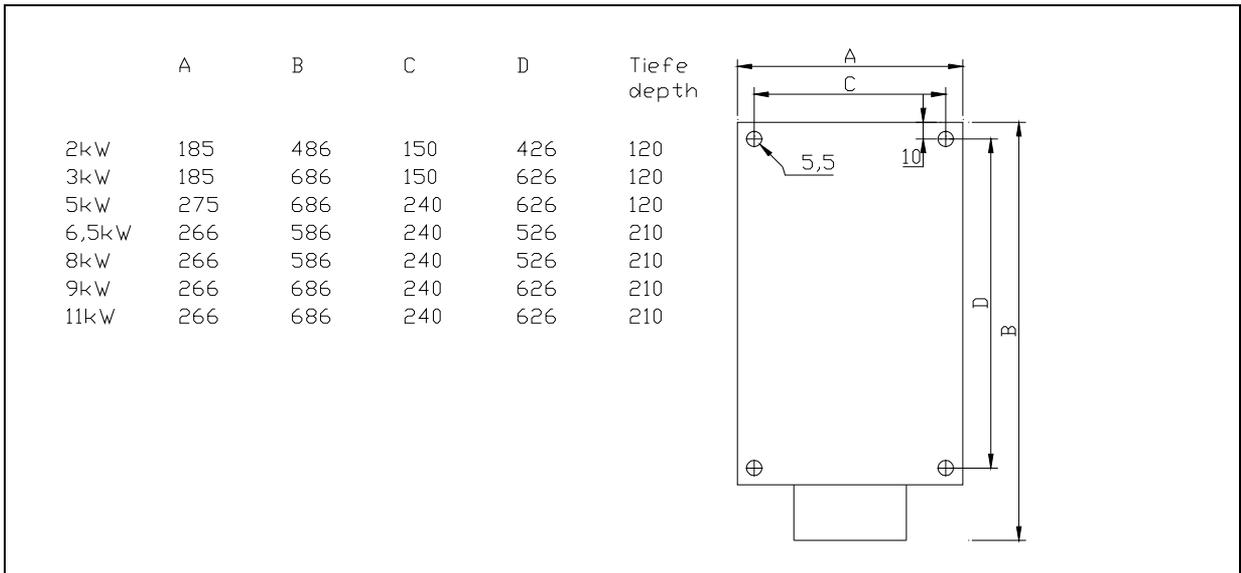


Figure 11: Dimension drawing of external brake resistor

PLEASE NOTE: In case of gearless or V-belt systems, consult MICOTROL as different dimensioning will be necessary!

4.6.2 Installation instructions

The brake resistor is to be installed outside locked switch cabinets to ensure reliable heat dissipation. Mount outside of closed cabinet for best heat dissipation. Recommendation: Over the cabinet, above venting slots.

- ! Ensure that the ambient temperature is below 50°C all the year round.
- ! Cable: Use shielded cable and connect shield to provided cable clamp. See Table-6 for cable cross section.



DANGER: Fatally dangerous high voltage on the brake resistor connections and on the brake resistor itself! The braking resistor is under lethally high voltage for approximately five minutes even after disconnection from mains power. The temperature of the break resistor housing can attain 100°C during operation.

4.7 Shaft information

Generally two specifications are required from the well *for each floor*:

- ! Deceleration switch (see Figure -13): Cuts out the selected run speed without delay. Levelling signal must follow approx. 4-10cm before the floor.
- ! Levelling switch (4 to 10cm before stopping point): Cuts out the run speed V1 without delay.

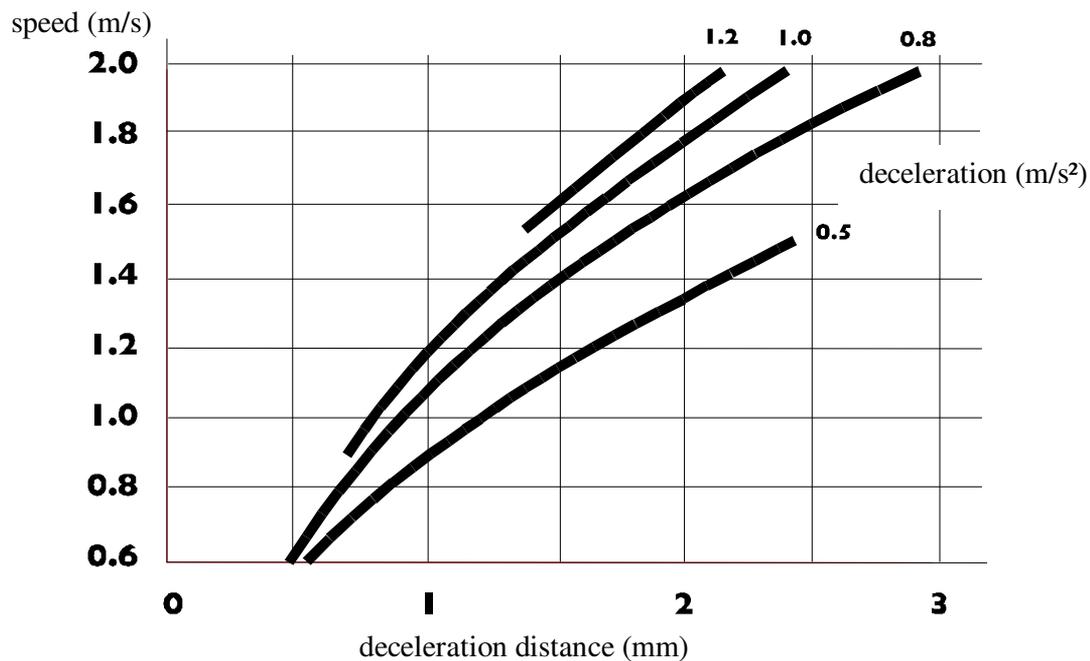


Figure 12: Estimating the retardation distance. Exact values depend on the specific lift and its design.

PLEASE NOTE: All switches must be adjusted as accurately as possible to prevent different run-in times.

4.8 Serial interfaces

Two different fields of application are covered by the two different serial interfaces in the control system:

- MICOBUS: RS485/RS232 for use of a serial interface for the direct connection with the lift control system, i.e. LIFTBUS, RSI, DCP.
- PC-Interface: RS232 for Controller setting with the use of the MICOTerminal or MICOview via a laptop PC.

4.8.1 MICOBUS (optional)

All input and output procedures can be realised through a serial interface (RS-232 or RS-485, standard Sub-D-connector on the front panel of the controller) (MICOBUS). Thus the controller can be connected directly to the control system without the usual control cables.

The data transfer protocol must agree with that of the control system. Further information can be obtained by calling **+49 (0) 6023 50 56 80**.

PLEASE NOTE: *Do not confuse this option with the PC control software described below!*

4.8.2 Control system setting via PC

With the help of a add-on unit MICOTerminal or a add-on PC-terminal-software it is possible to make all control system settings can be made online. With this the build in display and the push buttons of the Mcomfort become unnecessary.

For this feature the standard RS232-PC-Interface is used. The necessary PC-Software or MICOTerminal must be ordered separately.

The delivery insist on the unit MICOTerminal or the PC-Terminal-Software MICOview including the manual, in which operation and configuration between controller and PC is described in detail

An interface cable for connecting the RS-232 interface of the usual commercial PC and the jack on the front plate of the controller can be supplied as an optional accessory.

- 5 Menus and parameters
 - 5.1 Preliminaries
 - 5.2 Basic menu operation
 - 5.2.1 Display, keypad, menus
 - 5.2.2 Key functions
 - 5.2.3 Switching on the controller
 - 5.2.4 Menu structure
 - 5.3 Menu descriptions
 - 5.3.1 Main menu
 - 5.3.2 SPEED menu
 - 5.3.3 SPEED CURVE menu
 - 5.3.4 START/STOP menu
 - 5.3.5 DRIVE menu
 - 5.3.6 INTERFACES menu
 - 5.3.7 OPERATING PARAMETERS menu
 - 5.3.8 CONTROLLER PARAMETERS menu
 - 5.4 Monitor descriptions
 - 5.4.1 MONITOR 1
 - 5.4.2 MONITOR 2
 - 5.4.3 MONITOR 3
 - 5.4.4 MONITOR 4
 - 5.5 Fault memory description

Chapter overview:

This chapter describes the first-time controller operation after installation: It covers the necessary preparations, describes the basic steps for programming the controller and provides detailed setting instructions. The commissioning technician learns how to adjust the motor, lift control system and drive controller for smooth interaction.

5.1 Preliminaries

Before putting into operation for the first time you must:

- ▶ Make or check all connections and links to the motor, control system and encoder (see Figure-7).
- ! Insert the p.c. board and its cover (lacquer-coated front metal panel) inside the unit and screw in position after completing the installation and wiring work. There are no adjustments to make underneath the front panel!
- ! Set all the shaft switches with a tolerance of no more than +/-3mm for the deceleration switch (fast/slow changeover switch or V3 to V1) and of no less than +/-1mm for the levelling switch. The level signal must be given approximately 4 to 10cm before reaching floor level. It is important for the switch distances to be identical for each floor. The controller is unable to compensate differences from one floor to another!
- ? To set the well switch distance as a function of the speed, see Figure-13



DANGER: A controller that is not yet properly adjusted can cause dangerous jerking of the cabin! Above all, during the adjustment work there is a risk of the lift setting off in the wrong direction.. This could cause serious injury to any persons inside the cabin! Make sure that no one can use the lift before and during commissioning and before the lift passes the official inspection test! If necessary, set up barriers and provide warning signs on each floor. In any case you must switch off the external door controller in the lift control system!

5.2 Basic menu operation

The adjustments are made step by step via the controller-operating panel. The basic options and structure of the operating menus are described below.

5.2.1 Display, keypad, menus

The operating panel consists of a two-line LCD with two LEDs to the right and four keys below.

Operations are based on various „entry masks“. The successive masks are called „menus“. You can move from one menu to another and make changes to the values listed in a menu. Menus are classified as main menus and sub-menus (for example FINAL SPEED). Main menus correspond to chapter headings which have various sub chapters (for example FINAL SPEED V4).

5.2.2 Key functions

Key functions are identical for all menus, i.e.:

- ▶ The arrow keys UP and DOWN:
 - Selection of main menu

- Selection of sub-menu
- Changing of set values (parameters) as digits or ON/OFF
- ▶ Use the right-hand key, ENTER:
 - To move from the main menu into a sub-menu
 - To enter the „edit mode“ inside a sub-menu
 - To accept a changed set value (parameters) in the permanent memory
- ▶ Use the left-hand key, QUIT:
 - To move from „edit mode“ back into a sub-menu
 - To return from a sub-menu to the main menu
 - To navigate to another menu area using the selection menu

For convenient reference, the key functions are shown in the menu structure diagram printed on the front panel.

PLEASE NOTE: After you have changed a set value (parameter) you must press ENTER to permanently store the new value. Then the arrow in front of the set value, which indicates the editing mode, disappears. If ENTER is not pressed or if QUIT is pressed the original (default factory) values will be used.

5.2.3 Switching on the controller

- ? After you have switched on the controller (e.g. connected it to the mains power supply), the LCD will show the basic menu after about a second.


```
* Mcomfort speed con
24.11.2005 15:38:30
      command relays
0>V4 ^ v in1234 NFH38P
```

- ! Press the "UP" key to enter the main menu.

PLEASE NOTE: If no key is pressed within 15 minutes, the initial MICOVERT message will reappear.

5.2.4 Menu structure


You can navigate among three menu areas using the selection menu. To do so, keep the "QUIT" key depressed while simultaneously pressing the key associated with the desired menu area.

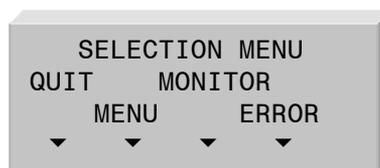

- MENU area: All the system data can be set here.
- MONITOR area: All the relevant operating data can be read out here.
- FAULT area: The last 100 fault messages with all relevant additional data can be read out here from the fault memory.

Main menus

There are eight main menus among which you can navigate using the UP and the DOWN arrow keys.

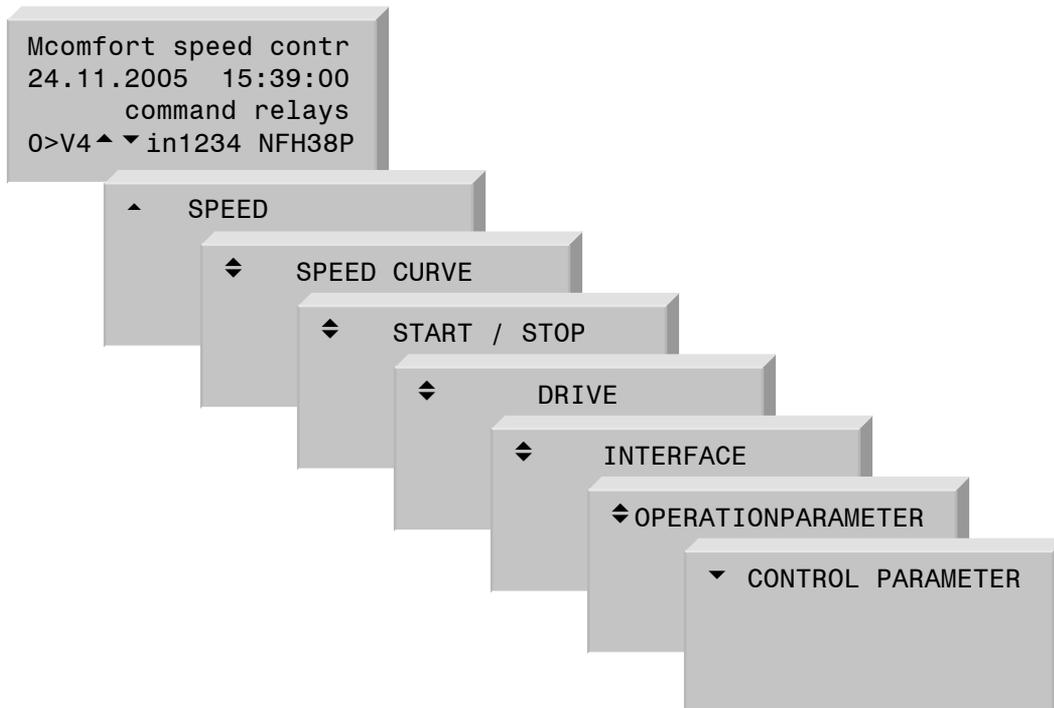

Sub-menus

- ? For navigating from the main menu to the sub-menus to change set values, use the pushbutton “ENTER”.
- ? For navigating among the main menus and changing set values, use the pushbuttons “UP” and “DOWN”.
- ! Changing data in sub-menus: Move from the display into the edit mode using ENTER, change the values using the arrow keys and press ENTER to save permanently.

PLEASE NOTE: Parameter changes can only be carried out, if no travel commands are applied, i.e. the lift is at standstill.

5.3 Menu descriptions

The following sections describe all the adjustment steps needed to put the controller and the drive into operation. Although the controller is set in the factory with default values taken from practice, it is still essential for you to go through the individual adjustment steps since some specific values will certainly need to be adjusted (e.g. the motor parameters).

5.3.1 Main menu

This main menu is merely a display menu; it cannot be edited, only read off.

The first line shows the controller type, the current date and time from the integrated clock module are shown underneath.

From the third and fourth lines the run curve status, all applied travel commands and the state of all output relays can be read off at a glance..

```

*** Mcomfort speed c
24.11.2005 16:10:30
      command relays
0>V4 ^ v in1234 NFH38P
    
```

RUN CURVE STATUS:

In the fourth line on the left the actual operating status is shown at any given moment during a lift run:

MAG	Motor biasing for 0.5s
0-V4	Acceleration from 0 to final speed V4
V4	Constant running at V4
V4-V1	Deceleration from final speed V4 to run-in speed V1
V1	Constant running at V1
V1-0	Final deceleration from run-in speed V1 to 0
STOP	Electrical hold of the drive for 0.5s

PLEASE NOTE: The stated final speed can be V2 to V4.

TRAVEL COMMANDS

In the middle of the fourth line the commands from control system are shown, for example ^ 1 3 (i. e. UP, V3, V1).


OUTPUT RELAYS

On the right side of the fourth line the current state of the six output relays are shows:

N	MAINS relay has picked up
F	DRIVE relay has picked up
H	CONTACTOR relay has picked up
3	Relay V<03 has picked up
8	Relay V<08 has picked up
P	Programmable relay has picked up

5.3.2 SPEED menu

The MICOVERT controller has a total of six different speeds (see Figure 12).

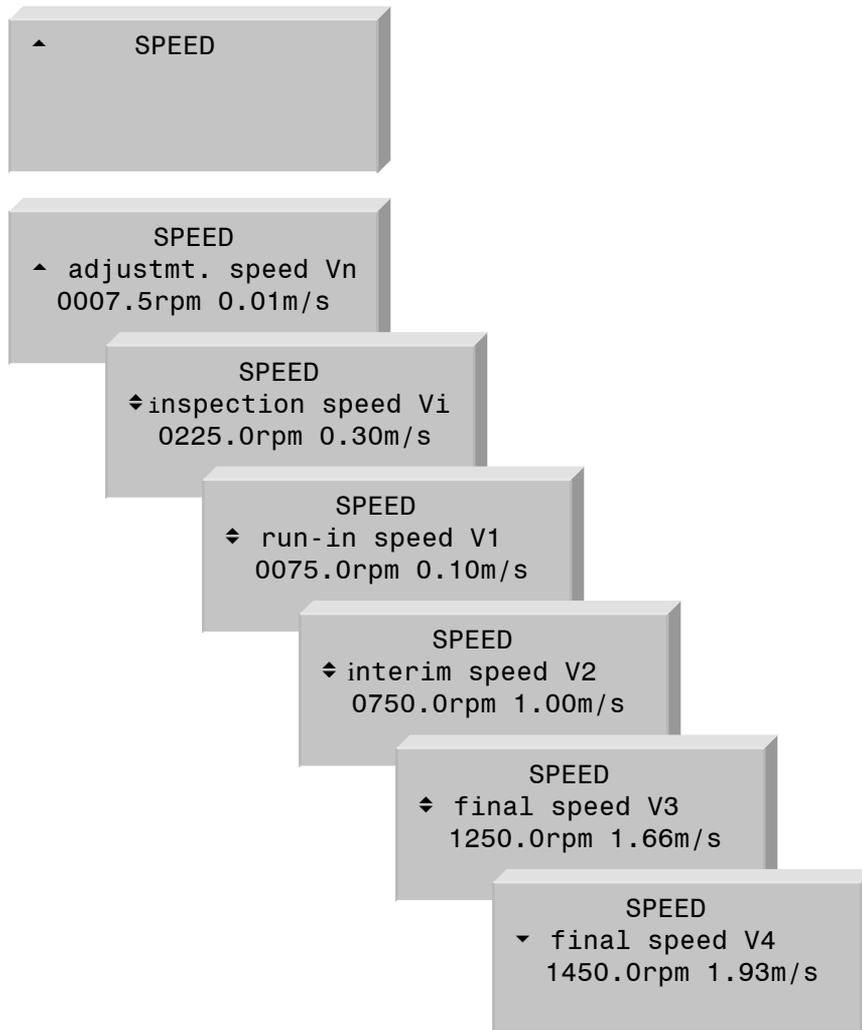

[Adjustment speed Vn]

Adjustment speed, variable from 0.5 to 100r.p.m. Is set so that the lift stops in level position after adjustment (only command Vn). Is used in the case of considerable rope elongation after which the cabin is no longer level after unloading. Requires an additional level flag that is shorter than that of V1.

[Inspection speed Vi]

Inspection speed, variable from 10 to 1500r.p.m. Set as required for inspection runs on the cabin roof and for returning the lift to its starting position.

[Run-in speed V1]

Run-in speed, variable from 1 to 100r.p.m. Set so that the lift stops level: If it stops too soon, V1 must be increased; if the cabin moves too far, V1 must be decreased. See chapter 6.3.3 for details of how to set the stopping accuracy via V1.

[Interim speed V2]

Interim speed, variable from 10 to 3000r.p.m. Is only used when there are different braking distances in the well, i.e. when the distances from the floor switch (=deceleration point) to the levelling switch vary. After calibration of the V2 braking distance it is advisable to set V2 as high as possible; caution: BRAKING PATH V2.

[Final speed V3]

Final speed, variable from 10 to 3000r.p.m.

[Final speed V4]

Alternative final speed, variable from 10 to 3000r.p.m. If necessary increase V4 until OVERLOAD CONTROL appears in the display.


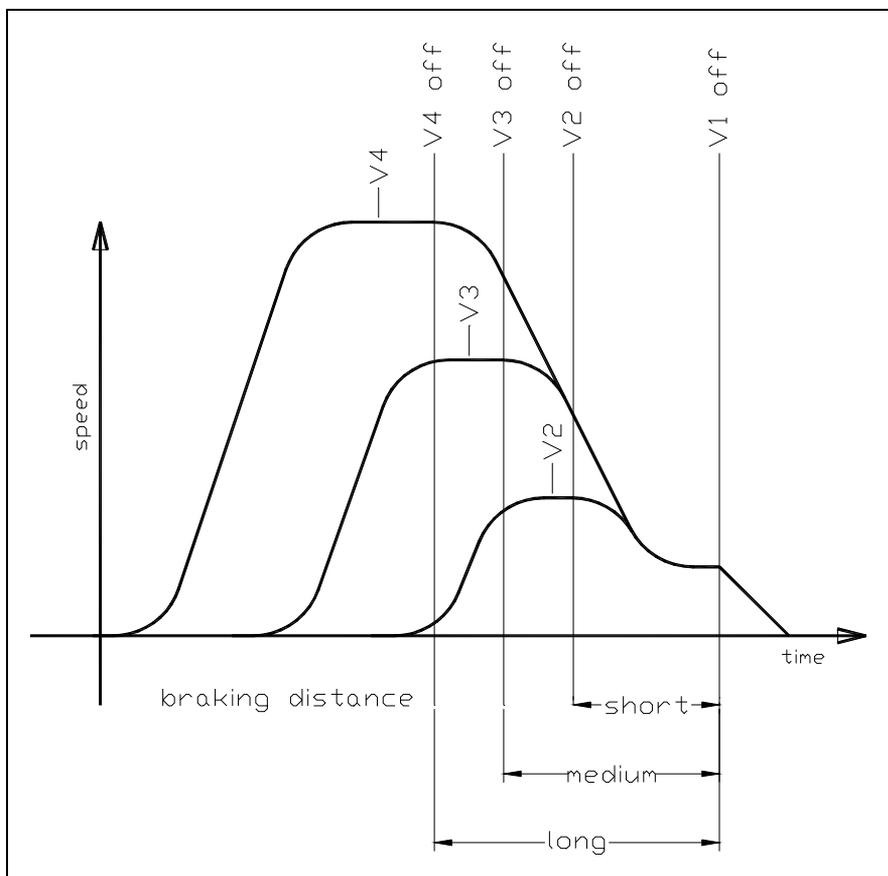


Figure 13: Using different speed commands.

5.3.3 SPEED CURVE menu

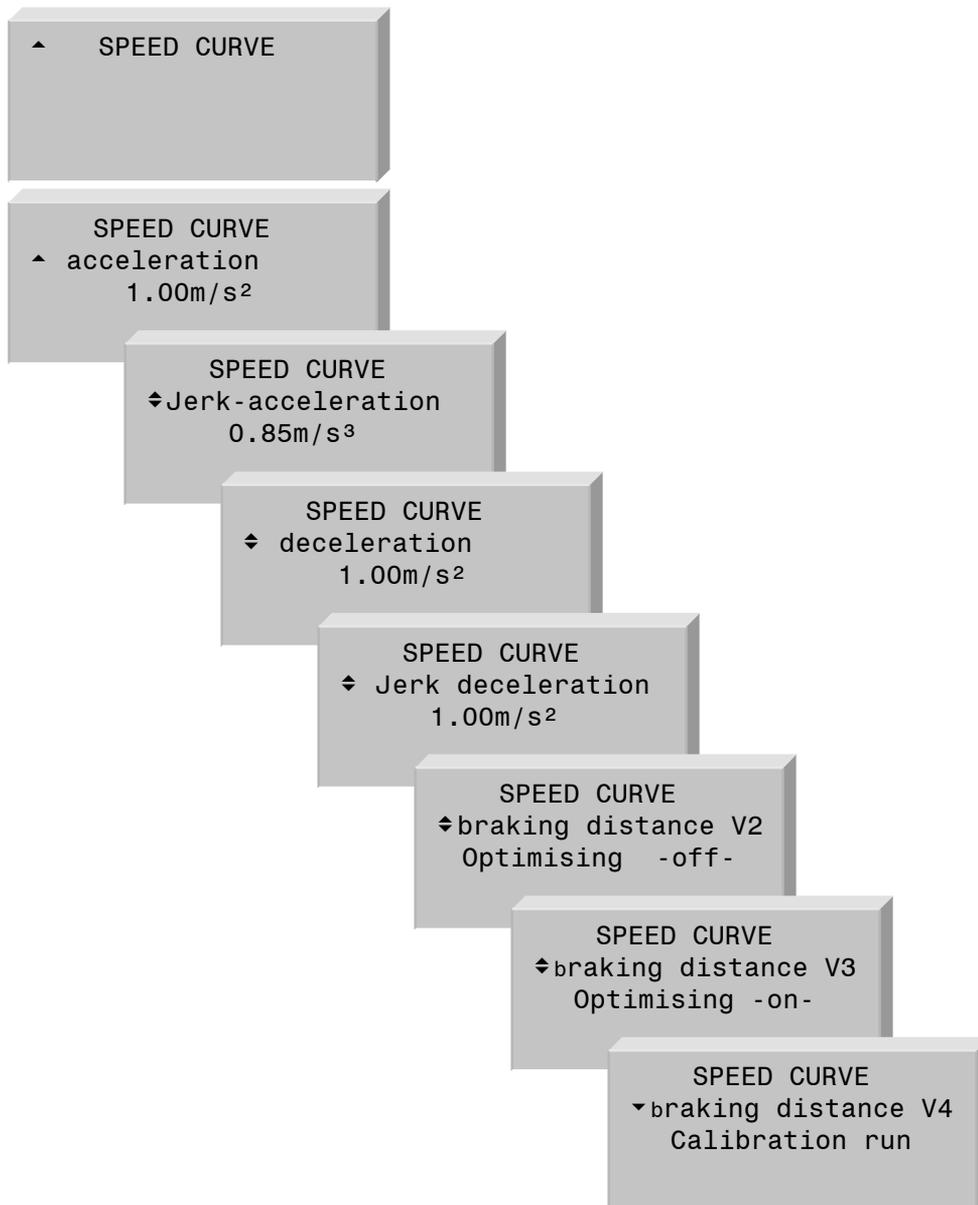

[Acceleration]

Ramp from 0 to Vmax, variable from 0.1 to 2.0 m/s².

[Jerk acceleration]

Transition from 0 to acceleration phase and transition from acceleration phase to Vmax, adjustable in 0.1 to 2.0m/s³. 0.1m/s³ corresponds to a soft run out and 2.0m/s³ to a hard run out (see Figure 14).

[Deceleration]

Ramp from Vmax to V1. Adjustment range: 0.1 to 2.0m/s².

[Jerk deceleration]

Transition from V_{max} to the deceleration phase and from the deceleration phase to V_1 , adjustable in 0.1 to 2.0m/s^3 . First set to 1m/s^3 , then after calibration of the $V_2/V_3/V_4$ braking distance, adjust according to sensations during a run.

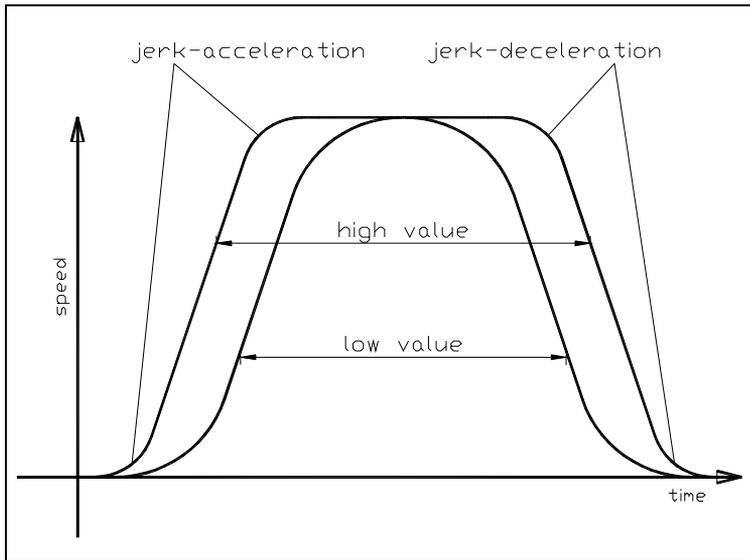


Figure 14: Settings for jerk-acceleration and jerk-deceleration

[Braking distance V2]

Scanning of braking distance for short stops (shorter distance from the floor switch to the levelling switch than on a long run). Is driven at V_2 speed. The controller decelerates immediately upon reaching the floor switch and creeps for a relatively long time to the levelling switch. The controller calculates the optimum deceleration on the basis of the braking distance from the floor switch to the levelling switch. If the V_2 run is repeated, the lift will pass the deceleration point (floor switch) and continue running up to the calculated deceleration point. The duration of the run-in speed V_1 is thus minimised to around 0.3 s. For details, see Figure 15.

[Braking distance V3]

Braking distance scanning for long stops with speed V_3 . The same applies here as in the preceding section.

[Braking distance V4]

Braking distance scanning for long stops with speed V_4 . The same applies here as in the preceding section.


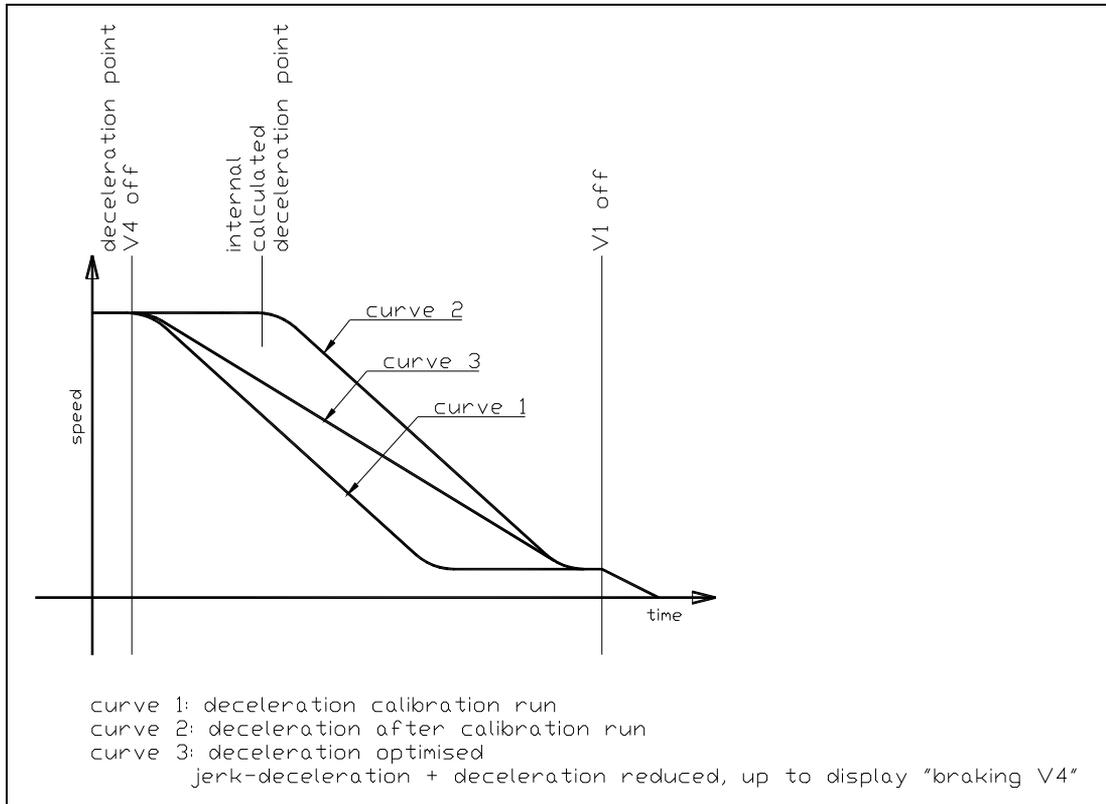


Figure 15: Sequence of braking distance calibration

PLEASE NOTE: If the three previous points are unwanted, V2, V3 and V4 must be set to OFF in the BRAKING DISTANCE display. In this case the duration of the run-in speed V1 must be adjusted via deceleration and JERK-deceleration (see above).

5.3.4 START/STOP menu

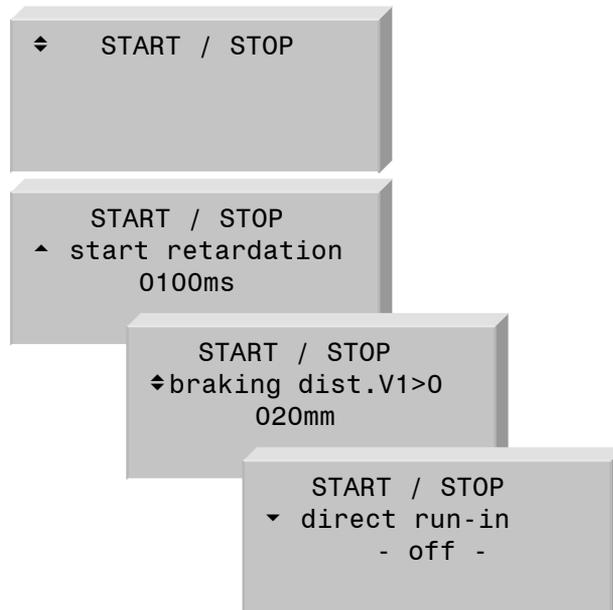

[Start retardation]

Starting delay, variable from 0 to 1000 ms. If the motor works against the mechanical brake due to the contactor and control system delay times, the controller start can be delayed until the mechanical brake has been reliably released.

[Braking distance V1>0]

Distance from the levelling switch to the stopping point. If you feel a small jerk during the end deceleration, reduce the speed value V1. The braking ramp can also be used to adjust the halting accuracy (see Chapter 6.3.3).

[Direct run-in]


Direct run-in. On: Deceleration time V1 is reduced to 0s.

5.3.5 DRIVE menu



CAUTION: The controller is not adapted to the specific lift system during factory adjustment. Running the lift before following adjustments have been made can cause damage to the lift system! You must enter the following adjustment values before running the cabin for the first time.

[feedbacksystem]

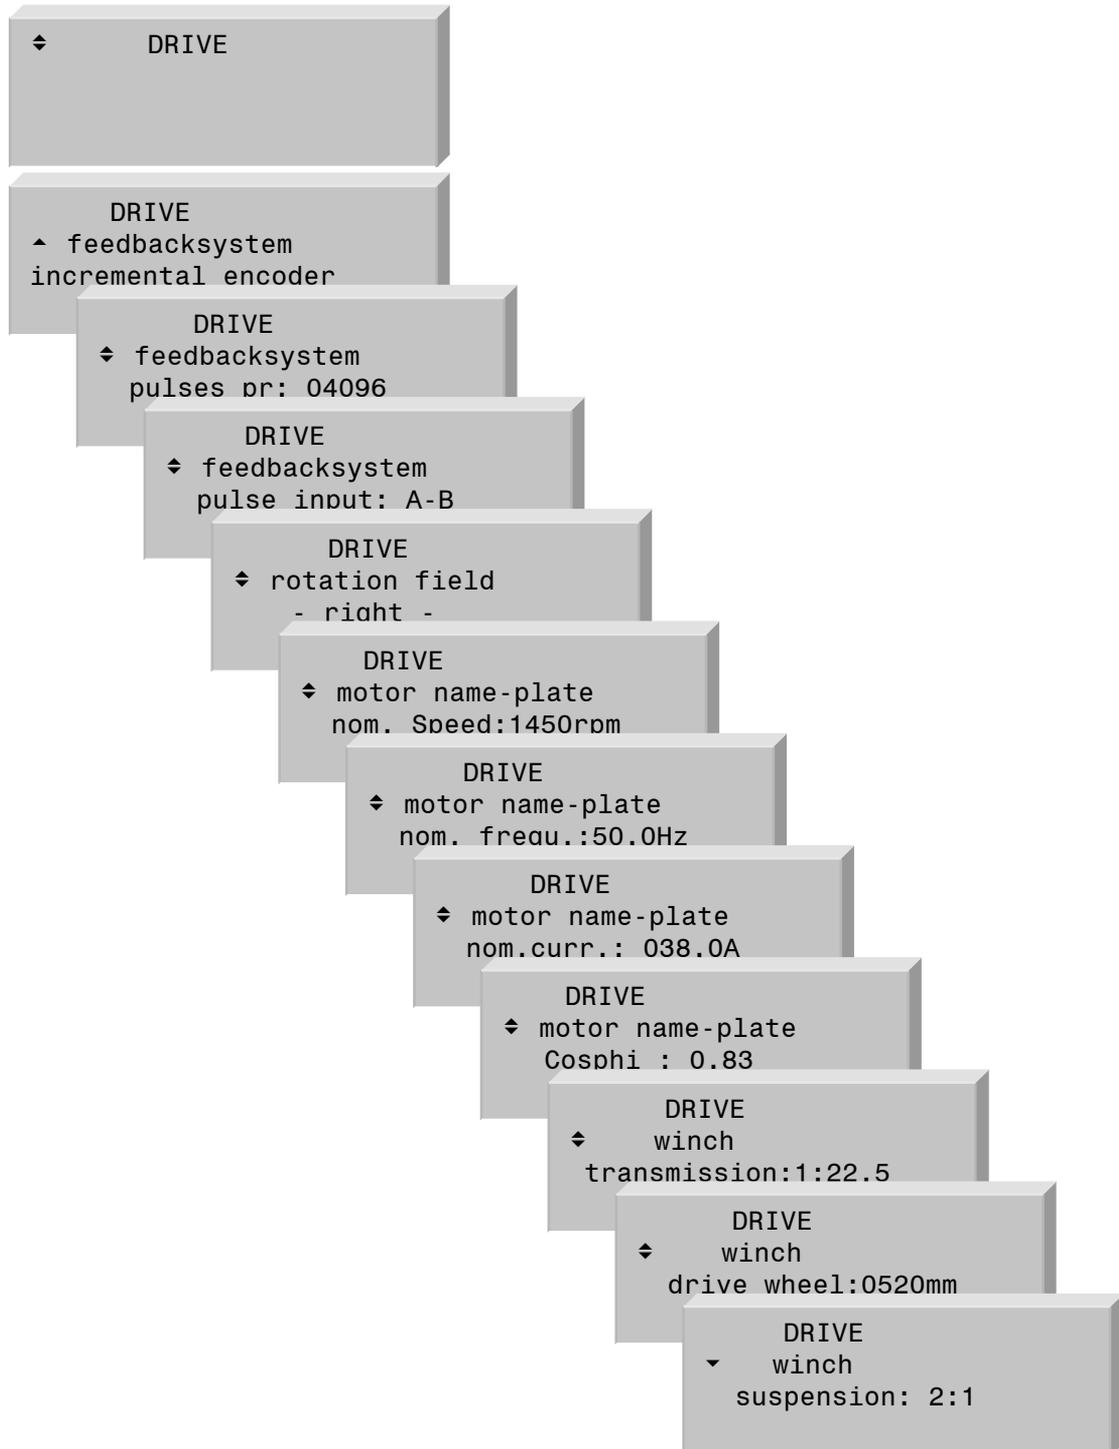

With this option you can activate the operation of the controller without an encoder. This is called open-loop mode.

To use the inverter without an encoder the following conditions must be met:

- ▶ maximum speed: 1,0m/s at suspension 1:1.
- ▶ maximum load: 1000kg at suspension 1:1.
- ▶ use only asynchronous motors and gear with self-locking.

It is possible that the controller needs a higher current to control the motor without an encoder.

The positioning may be less accurate without an encoder.

When open-loop mode is activated two new parameters must be set in the START/STOP menu:

[torque compensation]

The torque compensation works on start and stop. More torque generates more current in the motor. If the torque compensation is too low the motor breaks away! If the torque compensation is too high the motor becomes too hot.

A motor with a high cosine φ needs a small value. Typical values are:

cosine $\varphi = 0.87 \rightarrow$ torque compensation = 25%

cosine $\varphi = 0.67 \rightarrow$ torque compensation = 50%

[slip compensation]

When the motor stops after decreasing speed from V4 (V3,V2) to V1 increase the slip compensation until it works.

[encoder pulses]

Enter the number of pulses of the digital encoder per revolution. Possible entries: 1,000 to 10,000 pulses/revolution.

[pulse input]

In case of message „DIRECTION WRONG“, change from [A-B] to [B-A]. This function is corresponding to the exchange of the encoder input leads A and B.

[rotation field]

If motor runs into wrong direction (e. g. down with signal „UP“), use this function to change the direction of the rotation field. This corresponds to the exchange of the leads U and V.

[Nominal speed]

See the motor rating plate for the nominal speed value. If the plate gives a value of 1,000 or 1,500, consult the motor supplier, because the data given are for the synchronous speed instead of the nominal speed!

[Nominal frequency]

Nominal motor frequency. See the motor rating plate for the correct value.

[Nominal current]

See the motor rating plate for the correct nominal current for the motor.

[Cosine ρ]

See the motor rating plate for the cosine ρ value.

[transmission]

Enter the gear ratio. See the gearbox rating plate for the correct value.


[drive wheel]

Enter drive pulley diameter in (mm).

[suspension]

Enter rope suspension (e.g. 1:1 or 2:1).

5.3.6 INTERFACES menu

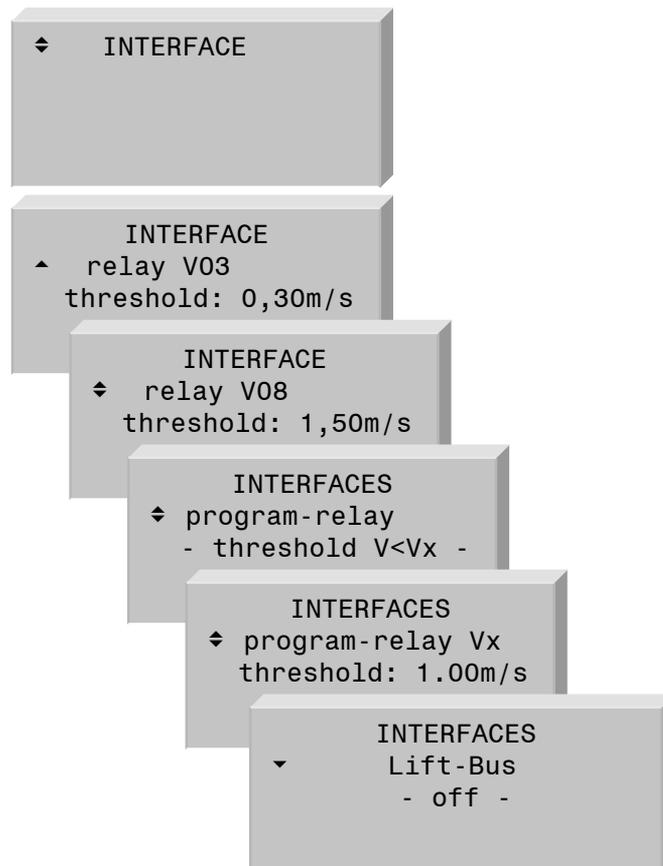

[Relay V<03]

Speed threshold $V < 0.3 \text{ m/s}$. For locking during run-in with open door. Closes when value falls below the adjustable threshold. Default value: 0.3 m/s .

[Relay V<08]

Speed threshold $V < 0.8 * V_{\text{nom}}$. Closes when value falls below the adjustable threshold. Default value: 1.0 m/s .

[Program-relay]

Freely programmable relay; one of the following functions can be assigned to the relay:

[V<Vx]	Speed threshold (adjustable from 0.2 to 4mm/s); relay drops out when Vx is exceeded.
[controller temp.]	The controller's heat sink becomes too hot; relay drops out.
[motor temp.]	Motor becomes too hot; relay drops out.
[overload]	Motor works in overload; relay drops out.
[external fan]	Additional cooling for the heat sinking block; relay drops out.
[thermistor]	Motor becomes too hot; relay picks up. The Error message 16-Motortemperature will appear at next stand still.

[Lift-Bus]

This parameter selects the following steering options:

[off] commands via terminal; standard.


[DCP3-(RS485)] Inverter commands via DCP3 protocol. This protocol is a replacement for terminal commands. The Inverter commands will be transmitted over the RS485 connection.
Please note the initialisation information of the lift-controller manufacturer.

[DCP4-(RS485)] Inverter commands via DCP4 protocol. This protocol offers a time- and speed-optimised run of lift, because the lift-controller delivers the absolute well position of the car. So the MICOVERT can compute the optimal speed and directly run in to the storey.
Please note the initialisation information of the lift-controller manufacturer.

PLEASE NOTE: When using DCP protocol, the information of the programmable relay is used as over-speed signal by the lift controller. So the lift will be disabled when this signal occurs.
Set the function of the programmable relay to [V<Vx] and the threshold Vx higher than the nominal speed of the lift.

PLEASE NOTE: To use the DCP3 and DCP4 protocol a special display-card is needed, with a RS485 Interface. Please state this with your order.

5.3.7 OPERATING PARAMETERS menu

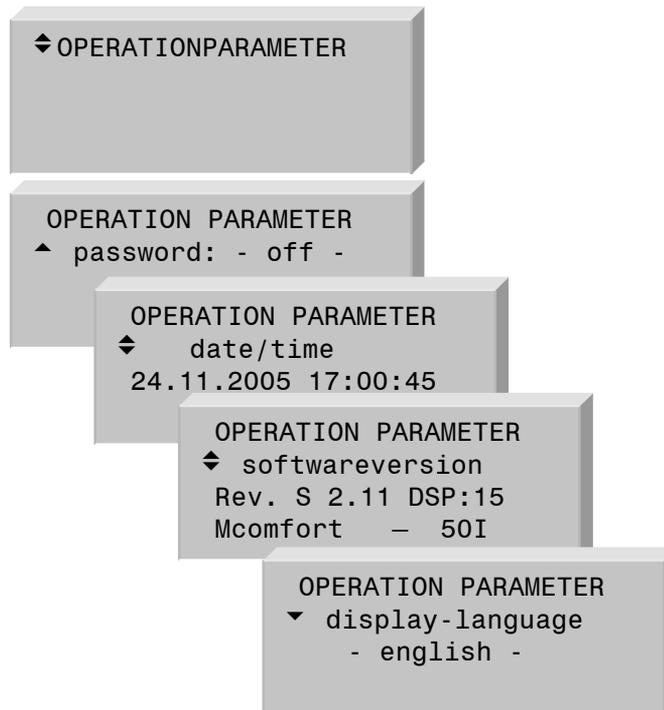

- [Password]** OFF: All parameters and controller settings are always accessible.
- ON: >000000. Enter any six-digit number. Access to all settings will be blocked for 15 Minutes after the last key has been pressed or after mains power has been switched off and on again. Please enter your password only after all adjustments have been made.



CAUTION: Loss of the password will prevent all further access to the controller! Note your personal password well. The system can only be unlocked in the MICOTROL factory.

[Time/Date]

The time/date stored in an internal clock circuit can be set: Using the ENTER key, each position of the time/date can be selected; using the UP/DOWN keys, the respective value can be changed. The date/time is accepted after the last value has been entered.


[Software version]

Display the version number of the software and the controller type. This operating manual was created on the basis of Version S2.00 DSP14.

[Display language]

You can choose between the following language versions for the menu displays: German, English and Turkish. Other languages are optional.

5.3.8 CONTROLLER PARAMETERS menu

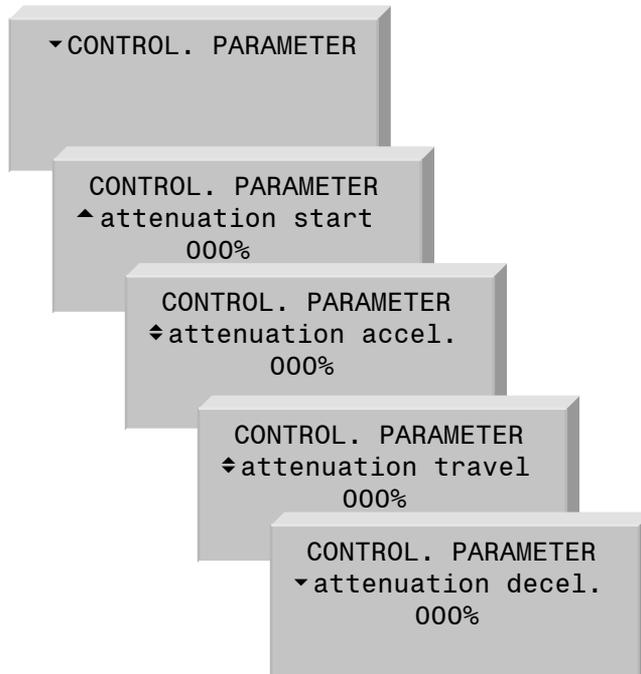

[Attenuation start]

Adjustment range from 0 to 100%. If vibrations occur during starting (motor vibrations, noise from motor), this value can be increased.

Recommendation: 0%.

[Attenuation accel.]

Adjustment range from 0 to 100%. If vibrations occur during acceleration, this value can be increased.

Recommendation: 0%.

[Attenuation travel]

Adjustment range from 0 to 100%. If vibrations occur during constant running, this value can be increased.

Recommendation: 0%.

[Attenuation decel.]


Adjustment range from 0 to 100%. If rope vibrations occur during deceleration, usually during run-in, due to un attenuated bearings, this value can be increased.

Recommendation: 0%

5.4 MONITOR menu description

In the MONITOR menu area (see Section 5.2.4), all controller operating data can be displayed. This menu area is for display only, i.e. no parameters can be changed, only read out. You can navigate directly to the MONITOR area using the selection menu from any other menu area. (see Section 5.2.4).

The MONITOR area comprises four pages (MONITOR 1 to 4), which you can select via the UP/DOWN keys.

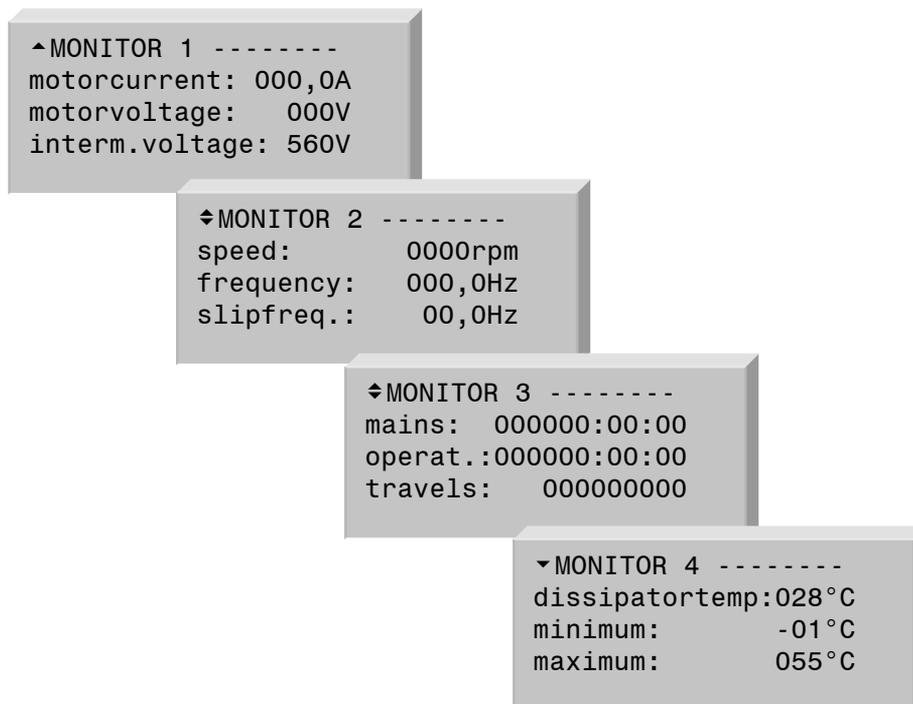

5.4.1 MONITOR 1

[Motor current]

Shows the actual motor current in Amperes.

[Motor voltage]

Shows the actual motor voltage in Volts.

[Intermediate voltage]

Shows the actual intermediate voltage in the controller in Volts.

5.4.2 MONITOR 2

[Speed]

Shows the actual speed of the motor in r.p.m.

[Frequency]

Shows the actual output frequency of the controller.

[Slip frequency]

Shows the actual slip frequency of the controller.

5.4.3 MONITOR 3

[Mains]

Shows the time in hours, minutes and seconds in which the controller was switched on (i.e. connected to mains power).

[Operating]

Shows the time in hours, minutes and seconds in which the controller was in operation.

[Travels]

Run counter, shows the number of all runs.

5.4.4 MONITOR 4

[Dissipater temp.]

Shows the controller heat sink / power transistor temperature. Should be under 75°C during normal operation.

[minimum]

Minimum value memory: Shows the minimum controller heat sink / power transistor temperature.

[maximum]

Maximum value memory: Shows the maximum controller heat sink / power transistor temperature.


5.5 Fault memory description

The FAULT MEMORY menu area (see Section 5.2.4) shows a maximum of 100 of the most recent fault conditions with all relevant additional information as well as time and date. This allows for convenient and effective fault analysis and cause determination.

After navigating to the FAULT MEMORY menu area, a status report is shown with the number of stored faults. By pressing the ENTER key, you can look at the last fault message including the time and date, assuming at least one fault was stored.

By pressing the DOWN key, you can delete all stored faults in the fault memory.

By pressing the UP key, you can page through all the stored faults.

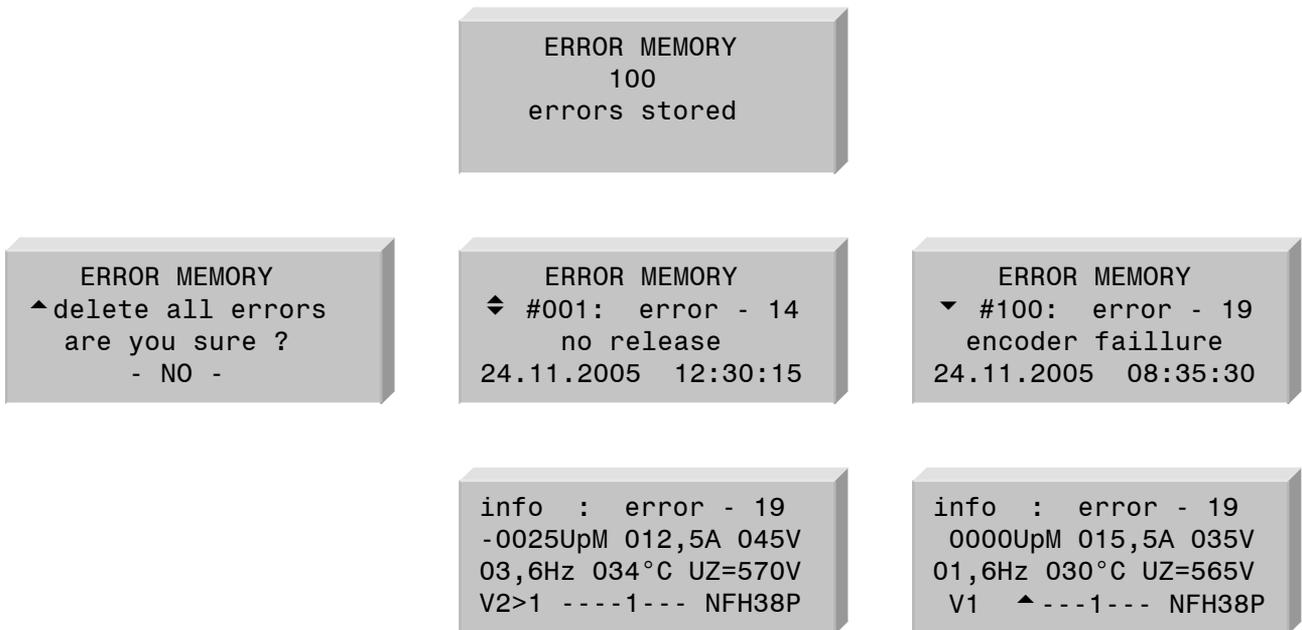

By pressing the ENTER key, you can call up further information on any given fault. This data can be used for subsequent fault analysis and elimination. Here a description:

The first line shows the fault code.

The second line shows the motor speed in r.p.m., the motor current in Amperes and the motor voltage in Volts.

The third line shows the output frequency, the heat sink temperature as well as the intermediate circuit voltage.

The fourth line shows the run curve status, the travel commands as well as the state of the output relays.

PLEASE NOTE: All the operating parameters listed above reflect the status as it was stored when the fault occurred!

6 Putting into operation

6.1 Preparations

6.1.1 Summary of installation instructions

6.1.2 Checking the installation

6.2 Entry of main data

6.2.1 Switching on the controller

6.2.2 Entering the motor parameters

6.2.3 Entering inspection speed

6.3.4 Inspection run

6.3 Commissioning, normal run

6.3.1 Test run

6.3.2 Calibration run

6.3.3 Setting the stopping accuracy

6.3.4 Checking the braking path

6.3.5 Checking the stopping accuracy

6.3.6 Starting behaviour

6.4 Inspection run

6.5 Setting V2 and V3

6.6 Direct run-in

Chapter overview:

This chapter describes how to put the controller into operation for the first time, needed preparations and conditions and how to check the connections. After the converter has been adjusted, the inspection and normal run follows as well as the direct run-in tests.

6.1 Preparations

6.1.1 Summary of installation instructions

Installing the controller

- ! Shielded cables must be used for the encoder lines and for any other encoders. Connect the cable shield of the external encoder to PE and to the corresponding separate shielding terminal on the controller's terminal strip.
- ! The ambient temperature in the control cabinet must not exceed 45°C.
- ! Be sure to remove the waste heat from the controller!
Provide adequate ventilation!

Connecting the controller

Connect the controller as per terminal diagram (see Figure 7). To do so, remove the metal cover by loosening the front screws.

Important details:

- ! Following cables must be shielded:
Motor cable, braking-resistor cable, encoder cable und thermistor cable.
Shield: Copper braiding, both sides connected to PE. There are special PE terminals at controller side.
- ! Fuses: Use only low voltage HRC fuses. The nominal fuse current must be no higher than double the nominal controller current.
- ▶ Check the mains voltage and nominal current (controller rating plate and the motor rating plate!).
- ▶ Speed default: Check that the control voltages in the control system and controller (rating plate) for conformance.
- ? Meanings of the various speed signals see Figure-12 (run diagram).
- ! Release signal: The release signal (=UP or DOWN) must be given with each run command and must not be switched off again until about 1 second after standstill is reached! EXCEPTION: On an inspection run the RELEASE signal must be switched off immediately.
- ! Main contactor and direction contactor: Actuated directly via CONTACTOR output relay; delayed after end of run. Never switch on main contactor jointly with the main switch!



CAUTION: Destruction of converter, if main contactor is not properly activated! Ensure that the inverter p.c. board (terminals L1, L2, L3) is connected to mains voltage before the main contactor is activated.

- ▶ DRIVE relay: If the controller lets the DRIVE relay drop out after the end of a run, the electromagnetic brake must be applied immediately by the control system.
- ! MAINS relay: Fault signal for mains failure, fuse failure, under voltage, temperature too high, encoder broken.
- ! Motor contactor: If no PTC thermistor is provided, terminals 19/20 must be bridged.

6.1.2 Checking the installation

You must carry out the following test steps before start-up:

- ▶ Make all connections to the motor, control system and encoder or check same, respectively.
- ▶ The shielding of the motor supply cable and brake resistance cable must be applied on both sides over a large area from the cable clip on motor housing to the cable clip on the controller.
- ▶ As a general rule shielded leads must be used for analog and digital encoders. The encoder shielding must be connected to both sides: On the motor side directly to the housing (PE), on the controller side to terminal 31 (capacitor for PE). Leads not in use must be connected on both sides to the protective conductor!
- ▶ Check the controller connections: Compare the following data with the values given on the controller rating plate:
 - Mains voltage
 - Motor capacity/motor nominal current
 - Control voltage
- ▶ Check the brake resistor: Check type, rating and resistance value!
- ! After installation and wiring, insert the p.c. board and the p.c. board cover (varnished sheet metal front cover) into the controller and fasten with screws. No more adjustments are to be made behind the front panel!



DANGER: High voltages dangerous to life! Through the buffering of the intermediate circuit capacitors some components are still under high voltage for at least five minutes even after the mains power supply has been switched off. The front cover must be folded in and fastened by screws during and after starting up the controller and when it is in operation.!

- ! Set all shaft switches with an accuracy of max +/- 5mm for the deceleration switch (switchover switch from fast/slow or V3 to V1, respectively) with an accuracy of min. +/- 2mm for the levelling switches. The levelling signal must be given approx. 4 - 10cm before reaching the floor level. It is essential that the switch distances are identical for each floor. The controller cannot compensate differences from floor to floor.

PLEASE NOTE: To set the distance for the shaft switch dependent on the travel speed, see Figure-11.

- ▶ Check whether the motor/drive unit with encoder and mechanical brake and the brake resistor are installed and wired correctly (shielding!).
- ▶ You must be familiar with the operation and use of the controller keypad and display. Should you have any questions, please read Chapter 5!



DANGER: *Dangerous jolting of the cabin can occur if the converter has not been adjusted. Ensure that the lift cannot be used by persons before and during start and until it has been approved by the appropriate authorities. If necessary, barriers and warning signs must be provided on each floor. Moreover, under all circumstances the external door control system must be switched off through the lift control system!*

6.2 Entry of main data

6.2.1 Switching on the controller

- ? After the controller has been switched on (i.e. connection has been made to the mains power supply), the controller performs a self-test and the LC display shows the main menu with the status of all inputs and outputs as well as the time and date from the internal clock circuit.

6.2.2 Entering the motor parameters



CAUTION: *The drive and the controller can be damaged through false initial settings! You must proceed and go through the following setting steps before the first run!*

- ! Go to the DRIVE main menu.
- ! Read the pulse count from the encoder rating plate or from the encoder specification and enter this in the DIGITAL ENCODER PULSE sub-menu.
- ! Read the motor nominal speed from the motor rating plate and enter in the NOMINAL SPEED sub-menu.
- ! Read the motor nominal current (A) from the motor rating plate and enter in the NOMINAL CURRENT sub-menu.
- ! Read the cosine ρ from the motor rating plate and enter in the COSINE ρ sub-menu.
- ! Enter gear ratio, pulley diameter and the rope suspension of the drive in the WINCH sub-menu.

6.2.3 Entering inspection speed

- ! Enter the required value V_i in m/s in the SPEED main menu.

6.2.4 Inspection run

- ! Check the relationship between control system and controller:
Now start a run with Vi. You must simultaneously give the command UP or DOWN.
- ! Check the direction of travel!
If the direction is wrong, change 'DRIVE - rotation field' from right to left.
- ! occurs error 'wrong direction'
change 'DRIVE – feedbacksystem – pulse input' from A-B to B-A.

PLEASE NOTE: *The main contactors are switched off when switching off the inspection run command Vi. The preselected direction (enable) UP or DOWN must also be switched off immediately at the same time!*

6.3 Normal run start-up

Check whether the parameters have been correctly stored in the DRIVE main menu.

6.3.1 Test run

- ! Change the final speed V4 'SPEED – final speed V4' to the nominal speed of the motor. (i.e. 1440,0rpm 1,6m/s)
- ! Check the relation between the control system and the controller:
Start a run up or down! When reaching the floor level the drive must run at a speed V1 for at least 1 seconds (check in display!)

PLEASE NOTE: *if the red ERROR-LED light up when travelling final speed, then the regulator puts out the maximum voltage or the maximum current to the motor. Now you must reduce the SPEED V4 in the main menu until the warning light no longer appears. Should the ERROR-LED light up during acceleration, reduce the value for ACCELERATION/JERK DECELERATION.*

6.3.2 Calibration run

The following measuring run serves to determine the braking path and is to be carried out at the final speed V4 or V3, V2.

- ! Select the MEASURE setting in the TRAVEL CURVE / BRAKING PATH-V4 menu (ENTER key).
- ! Carry out an UP or DOWN run at V4.
- ! Repeat the two previous steps for the interim speeds V2 and V3 if these are needed.

6.3.3 Setting the stopping accuracy

Measure the distance between the levelling switch and the stopping point. Enter this value in 'START / STOP – breaking dist. V1>0'. Change the value until the stopping accuracy is OK.

- ▶ If the cabin travels too long before stopping: Increase V1.
- ▶ If the cabin stops with a jerk: Reduce V1.

PLEASE NOTE: Always run to the same stopping position!

6.3.4 Checking the braking path

Now check the braking path at each floor level.

- ! Run to each floor level both UP and DOWN.
- ? When doing this note the display in the RUN COMMAND menu. The following displays must appear one after the other:

MAG	pre magnetizing the motor
0>V4	acceleration to final speed
V4	constant speed
V4>V1	deceleration from V4 to run-in speed V1
V1	run-in speed for about 0.3 to 1 second!
V1>0	final deceleration to speed 0
STOP	finished

PLEASE NOTE: if the run-in speed period is different for the various floors, correct the deceleration switch.

6.3.5 Checking the stopping accuracy

Now check the stopping accuracy on all floors.

- ! Run to all floors both UP and DOWN.
- ▶ Check the stopping accuracy and if necessary correct the levelling switch if the stopping accuracy varies.

PLEASE NOTE: As soon as the position of the well switch has been changed a new measuring run must be carried out to enable the controller to store the changed well data!

6.3.6 Starting behaviour

- ▶ Check whether the drive starts up while the brake is applied.
- ! Increase the RETARDATION in the START/STOP menu (value in milliseconds) should the drive start up with the brake applied.

6.4 Inspection run

To conclude the setting of the controller, carry out runs with different loads to check for optimum comfort and driving capacity.

In this respect particular attention is to be paid to the acceleration and deceleration behaviour as indicated by travel sensations.

Cabin jerking

- ▶ If the deceleration is noticeable in the cabin, first reduce the JERK DECELERATION then the DECELERATION in the SPEED CURVE main menu until the red LED comes on and BRAKE PATH V4 appears in the display. If the display still shows BRAKE PATH V2, V3, then the speeds V2 or V3, respectively, are to be reduced until the message disappears.
- ▶ As soon as the red LED lights up in any run situation, the following data must be reduced respectively: Maximum speed (on fast constant run), acceleration (during acceleration) or deceleration (during deceleration). If necessary, the well switches are to be set at a greater distance from the stopping point!

For diagnosis and elimination of setting faults, also see Chapter 7!

Rope vibration

Should noticeable vibrations occur upon deceleration increase the ATTENUATION/DECELERATION.

6.5 Setting V2 and V3

Now speeds V2 and V3 can be set until the red LED just lights up and BRAKE PATH V2 or BRAKE PATH V3, respectively, appear in the display. Then reduce until both go out.

6.6 Direct run-in

If the direct run-in is used, the crawling time, that means the time when the elevator is running with V1, is reduced to 0. This requires the following conditions:

- ▶ The position of the shaft switches must be very exactly, the accuracy must be about 1-2mm.
- ▶ A digital shaft copy system should be preferred
- ▶ The cycle time in the PLC should be less than 5ms, i.e. the shaft switch information must be passed on to the controller in between 5ms.

If these conditions are not fulfilled, the option direct run-in must not be activated, because the elevator will not stop exactly because of the inaccurate shaft information.

7 Description of Faults

7.1 Fault diagnosis

7.1.1 LED indicators

7.1.2 Display messages

7.1.3 Unexpected running characteristics

7.2 Replacement of EPROMS

7.3 Servicing and spare parts

Chapter overview:

This chapter looks at a variety of faults that can occur when putting the controller into operation. It also describes how to use new EPROM versions with current programs. Finally, you will learn a little about maintenance, servicing and spare parts.

7.1 Fault diagnosis

7.1.1 LED indicators

To the right of the display you will find one green and one red LED, which are used to provide important signals supplementary to information on the display.

GREEN LED: This LED is always on as long as there are no serious faults in the controller or in its vicinity.


RED LED: The red LED is on continuously during each fault message until no command signal is applied and until the fault has been eliminated. The red LED lights up briefly if the controller is operating in the voltage or current limit range.

7.1.2 Display messages

This section describes the system messages that may appear on the controller's LC display.

Help is available in the case of irregular controller behaviour and for any problems in connection with critical lifts.

Faults are indicated by plain text fault messages in the first display line. The message will not disappear until the cause of the fault has been eliminated or the wrong setting has been changed, or until a new start is made, respectively.

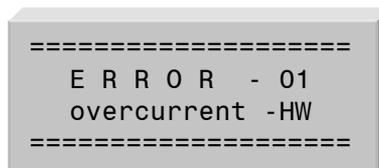

- ! Hardware current monitoring was activated.
- ▶ Check all parameters in the menu 'DRIVE'
- ▶ Motor blocked, brake not released
- ▶ Check the encoder connection (fig. 8,9). The cable shield must be connected on both ends.
- ▶ Motor nominal current must be less or equal controller nominal current (see motor and controller rating plate!).
- ▶ Check the star-delta connection of the motor
- ▶ Check for no short-circuit on output U, V, W
- ▶ Increase 'CONTROL. PARAMETER – attenuation contr.'

```
=====
E R R O R - 04
overcurrent -B
=====
```

- ! Hardware current monitoring of brake transistor was activated.
- ▶ Brake resistor is short-circuited.
- ▶ Brake resistor is too low-resistance.
- ▶ Earth fault in the cable to the brake resistor or in the brake resistor.

```
=====
E R R O R - 05
overcurrent -U
=====
```

```
=====
E R R O R - 06
overcurrent -V
=====
```

```
=====
E R R O R - 07
overcurrent -W
=====
```

- ! Software current monitoring of the motor was activated.
- ▶ Check all parameters in the menu 'DRIVE'
- ▶ Motor blocked, brake not released
- ▶ Check the encoder connection (fig. 8,9). The cable shield must be connected on both ends.
- ▶ Motor nominal current must be less or equal controller nominal current (see motor and controller rating plate!).
- ▶ Check the star-delta connection of the motor
- ▶ Check for no short-circuit on output U, V, W
- ▶ Increase 'CONTROL. PARAMETER – attenuation contr.'

```
=====
E R R O R - 08
temperature - IGBT
=====
```

- ! The controller's power resistors or heat sink overheats.
- ▶ The ambient temperature in the control cabinet must not exceed 45°C!
- ▶ Check the controller current during empty run: Rated current of the controller may not be exceeded during final speed!

```
=====
E R R O R - 09
Temperature recti.
=====
```

- ! Rectifier or heat sink of controller overheats.
- ▶ The ambient temperature of the control cabinet must not exceed 45°C!
- ▶ Check the controller current during empty run: Rated current of the controller may not be exceeded during final speed!

```
=====
E R R O R - 10
Int.-overvoltage
=====
```

- ! Interim circuit voltage is too high:
- ▶ Compare mains voltage with controller rating plate. Voltages must be identical.
- ▶ Brake resistor is not connected or wrongly dimensioned (see Chapter 4.6.1). Take a look at the converter plate.
- ▶ Decrease 'SPEED CURVE – deceleration' and 'SPEED CURVE – deceleration'

```
=====
E R R O R - 11
Int.-undervoltage
=====
```

- ! Interim circuit voltage is too low:
- ▶ Safety circuit or mains contactor opens on travelling
- ▶ Compare mains voltage with controller rating plate. Voltages must be identical.
- ▶ Control system provides run command, but main contactor does not make.

```
=====
E R R O R - 12
Contactor start
=====
```

- ! After applying a run command + release, the main contactor does not make.

- ▶ Check the wiring for activation of the main contactor: After closing the "main contactor" output relay of the controller, the main contactor needs to be activated.
- ▶ At least one phase of the main controller supply is missing (L11, L21, L31).

```
=====
E R R O R - 13
c o n t a c t o r   t r a v e l
=====
```

- ! The main contactor drops out during the run or before termination of braking.
- ▶ On travel stop mains contactor must still have power for at least 0.5 sec.
- ▶ Check the wiring for activation of the main contactor: As long as the " main contactor " output relay of the controller is closed, the main contactor needs to be activated.
- ▶ At least one phase of the main controller supply is missing (L11, L21, L31).

```
=====
E R R O R - 14
n o   r e l e a s e
=====
```

- ! Release "Direction UP" and "Direction DOWN" has disappeared during run or before end of braking.
- ▶ Check the commands and release signals as per run diagram.
- ▶ Safety circuit has opened during run.
- ▶ Inspection run at a speed other than Vi.


```
=====
E R R O R - 15
r e l e a s e   U P + D O W N
=====
```

- ! Release "Direction UP" and "Direction DOWN" are applied simultaneously.
- ▶ Check the commands and release signals as per run diagram.


```
=====
E R R O R - 16
m o t o r   t e m p e r a t u r e
=====
```

- ! Motor PTC thermistor was activated.

- ▶ Wrong PTC thermistor installed in the motor.
- ▶ Motor PTC thermistor is not properly connected to controller terminals 19, 20.
- ▶ If the motor PTC thermistor is external checked, then the controller terminals 19, 20 must be short circuit.
- ▶ Motor is really too hot! Check parameters in the DRIVE menu. Motor current must not exceed nominal value during constant run.

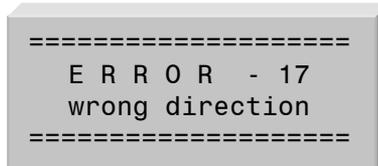

- ! Menu DRIVER/TACHO INPUT: Change from A-B to B-A.
- ▶ Check digital tacho and its connection cable.
- ▶ Check the mechanical link between the tacho-generator and the motor shaft.

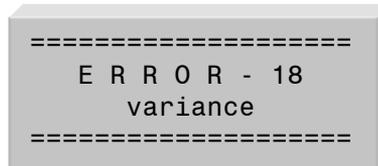


- ! Motor speed cannot keep up with the set run curve.
Possibility A: Message while starting or during a run
- ▶ Compare the pulse number setting (DRIVE menu) with the tacho pulses and correct if necessary.
- ▶ Compare the motor data setting (DRIVE menu) with the motor rating plate and correct if necessary.
- ▶ Check encoder and encoder coupling!
- ▶ Motor rating is inadequate.
- ▶ Mains voltage is too low.

Possibility B: Message during deceleration.

- ▶ Check brake resistor (see Chapter 4.6).
 - ! Brake path too short (see Figure 11).
 - ! Main menu SPEED CURVE: Reduce JERK DECELERATION / DECELERATION.

Possibility C: Message during stop (during the length of the levelling flag)

- ▶ Main contactor or mechanical brake is switched off too soon. The mechanical brake must only be applied when lift is at standstill! Main contactor must remain made for approx. 0.5 seconds after standstill.

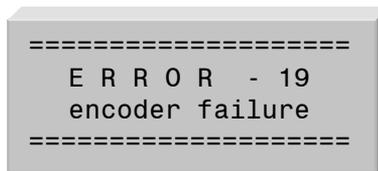


! no pulses from the tacho

Possibility A: Motor does not start up.


- ▶ Mechanical brake is not released.
- ▶ Line between controller and motor is broken.
- ▶ Star point missing from motor winding.

Possibility B: Motor starts up but is switched off by the controller after a few seconds.


- ▶ No tacho pulses in at least one tacho input pulse line.
- ▶ Check tacho-generator!
- ▶ Check tacho-generator connections!
- ▶ Check the tacho-generator coupling!

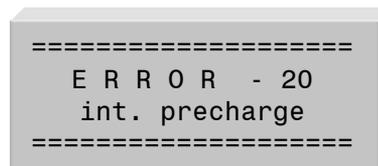


- ! Internal intermediate circuit voltage is too low approx. 5 seconds after mains voltage is switched on.
- ▶ Mains voltage is too low.
- ▶ Controller is designed for higher mains voltage: Compare controller rating plate with mains voltage.
- ▶ Earth fault on brake resistor or brake resistor line.

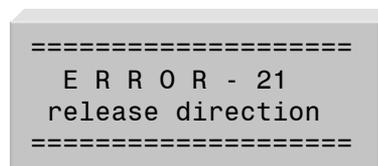


- ! Release "Direction UP" and "Direction DOWN" change during run.
- ▶ Check the commands and release signals as per run diagram.

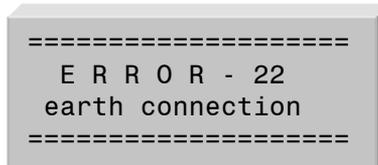

- ! One or more motor phase has connection to earth.
- ▶ Check motor and motor wires.

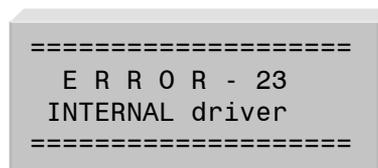

- ! The voltages for the IGBT's are down.
- ▶ Contact Micotrol service.

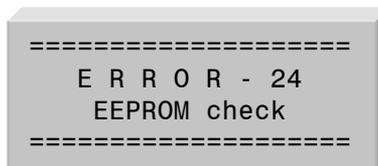

- ! The checksum in the EEPROM is wrong.
- ▶ Contact Micotrol service.



- ▶ A certain error has three times in follow arisen.
(the attitude which errors are reacted can only in work with MICOTROL be made and must thus when ordering be indicated. If necessary contact service!)
- ▶ Separate the regulator for 10sec from mains and then restart.
- ▶ Contact Micotrol service.

! red LED ERROR lights up during travel → overload !

Possibility A: during acceleration

! SPEED CURVE main menu: reduce ACCELERATION and JERK-ACCELERATION!

Possibility B: during constant run with V4

▶ Mechanical brake not released, drive is blocked. Check mechanical brake.

▶ Check parameters in DRIVE main menu!

! Main menu SPEED: reduce V4!

▶ Check parameters in DRIVE main menu!

Possibility C: during deceleration

! Main menu SPEED CURVE: reduce DECELERATION and JERK-DECELERATION!

▶ Check brake resistance! Type? Connections? Capacity?

▶ Command V1 is switched off too soon.

7.1.3 Unexpected running characteristics

Drive starts up with a jolt

Possibility A: On an empty up run

! Motor must not start up against an applied brake! If necessary, extend the starting delay (START/STOP menu).

Possibility B: On an empty down run.

▶ In the case of a 2:1 suspension with rollers on the side of the cabin, make sure that the cabin guide system is working properly otherwise the cabin will be pulled at first on just one side upon start.

▶ The use of guide rolls is advisable for perfect starting at speeds higher than 1.6m/s.

Cabin/drive vibrates while running in

! Increase ATT. DECEL. (CONTROLLER PARAMETERS menu) until there are no noticeable vibrations in the cabin anymore.

Jolting while stopping.

Possibility A: When passing the levelling switch.

- ▶ Reduce the BRAKING RAMP (SPEED CURVE menu), e.g. from 0.1m/s² to 0.05ms². You must then adjust the stopping accuracy, however, with V1 (SPEED menu).

Possibility B: When at standstill.

- ▶ Main contactor drops out too soon (see description of FAULT SET/ACTUAL DIFFERENCE, 2nd possibility).
- ▶ Mechanical brake engages too soon.
- ▶ UP or DOWN command is switched off too soon. UP or DOWN must be retained for at least 0.5 seconds after standstill is reached.

7.1.4 Controller faults

If changing of the parameters and data entries cannot eliminate controller faults and disturbances there is generally no chance of repairing the controller successfully on site. Customer repairs to the main board are not possible because they require special instrumentation, which is only available in our testing laboratory.

PLEASE NOTE: *We draw express attention to the fact that repairs to the main board should only be carried out by our service technicians as there is a risk of destroying expensive digital components. IGBT power semi-conductors should be replaced only by MICOTROL!*

The front panel should not be removed again from the p.c. board once the terminal connections have been made. Underneath the panel are touch-sensitive digital components that will be destroyed especially if subjected to static charge. There are no control and indicator elements under the metal cover that need to be accessed.

7.2 Replacement of EPROMS

In certain special cases it may be necessary to replace the programmable memory component (EPROM) in consultation with MICOTROL. This might be necessary in special cases of application where use is made of modified software.

In these cases, proceed as follows:

- ! Disconnect the controller from mains.
- ! Remove the front panel.
- ! MICOTROL will let you know which EPROM has to be replaced. Carefully pull it up and out of the socket, preferably using the clamp-type tool designed specially for the purpose. First note which way the notch on the top of the component is pointing!

- ! Insert the replacement IC in the correct direction (notch). Work carefully so that all the legs slide into the socket without buckling.

7.3 Servicing and spare parts

Servicing

The Mcomfort series of controllers require no maintenance. The electronic components used display long-term stability and are subject to no wear. Servicing is confined, therefore, to checking the terminals regularly to ensure that they are done up tight and examining the relay contacts on the output relays for signs of arc erosion.

To prevent leakage current and flashover you should remove any dust which is deposited on the chips and heat sinks. Pay special attention to the heat sink fins and the external fans where present.

Replacement parts

No repairs may be carried out to the main board on-site and none of its components may be replaced without risk of destroying the sensitive digital components. All work on the main board should be carried out at the factory in Alzenau, Germany. Replacement parts for defective components should be obtained only from MICOTROL. We guarantee that the components are suitable for the purposes and have been tested.

PLEASE NOTE: Power semi-conductors may only be replaced by MICOTROL!

8 Product liability and warranty

We guarantee the faultless condition of our product as described in our advertising, the product documentation we have published, and this operating manual. Product characteristics over and above this are not guaranteed. In particular we give no guarantee nor do we accept any legal responsibility or liability of any kind for the Mcomfort controller, for its efficiency or faultless operation for any other purpose than that defined in Chapter 2.1.

Claims for damages are generally excluded, except in the case of proven premeditation, gross negligence by MICOTROL, or the absence of any promised features. In particular we do not accept any liability if the controllers are used with lift control systems, encoders, power supply systems and drive motors for which the controllers are unsuitable as stated in this operating manual or which fail to conform with the customary state of technology by virtue of their individual design.

We also disclaim responsibility for any damage to lift facilities and building facilities due to malfunction of the product or due to errors in the operating manual.

We are not responsible for violation of the patents and other rights of third parties.

We shall not be liable for any damage resulting from improper handling as defined in this operating manual. We expressly exclude liability for lost profit and especially for consequential damage due to the non-observance of safety regulations and warnings and/or resulting from accessories not supplied by MICOTROL.

MICOTROL products may not be sold in the United States of America and other countries governed by U.S. American law.

MICOTROL products are designed for a long service life. They conform with the current state of science and technology and were individually tested in all their promised functions prior to shipment. MICOTROL is continuously engaged in product and market analysis in the interest of further development and constant improvement. However, if any malfunctions or breakdowns occur in spite of all the preventive measures, you should notify the customer service department in Alzenau, Germany. We assure you that suitable action to rectify the damage will be taken without delay.

Terms of warranty

We guarantee the product's proper working order as defined in this operating

manual for a period of 24 months after shipment as per delivery note.

Repairs will only be carried out free of charge if the operating manual was observed for storage, transportation, installation, commissioning and operation.

Interventions in a unit by the customer or third parties are only allowed after special consultation with MICOTROL. If this condition is not observed, MICOTROL will accept no responsibility for any damage to the unit, injury to persons or consequential damage; in this case the warranty shall expire.

MICOTROL also disclaims all responsibility for unit faults resulting from damaged or functionally defective equipment in the controller's environment or following the use of accessories which were not supplied by MICOTROL.

The General Terms of Business of **MICOTROL** International GmbH shall apply.

9. General Terms of Trade

I. General Conditions

1. The scope of the supplies or services (hereinafter called Supplies) shall be defined by the written declarations of both parties to the contract. General terms and conditions of the Purchaser shall apply only where expressly accepted in writing by MICOTROL. Offers are subject to alteration. All orders and agreements will only become binding through MICOTROL's written confirmation or when dispatching the Supplies.

2. For cost estimates, drawings and other documents (hereinafter called Documents), MICOTROL reserves all rights, right, title and interest in the property and the copyright. Such Documents may not be made available to third parties without the prior consent of MICOTROL.

3. Partial Supplies shall be permissible where they are appropriate and can be reasonably expected by the Purchaser.

II. Technical Data

Technical data, e. g. on dimensions, weights and performance numbers, illustrations and drawings are binding only within the scope of common technical tolerances, unless they are explicitly called binding.

III. Prices and Terms of Payment

1. Prices shall be ex works and shall exclude packing and the sales tax payable under the applicable law.

2. All Supplies shall be paid cash before delivery by the Purchaser.

3. If MICOTROL has undertaken the assembly or erection, the Purchaser shall bear all required incidental costs in addition to the agreed contract price unless otherwise agreed.

4. Payments shall be made free at MICOTROL's paying office.

5. The Purchaser may set off only those claims that are undisputed or have been finally determined in a legally binding manner.

IV. Retention of Title

1. Notwithstanding delivery and the passing of risk in the Supplies, or any other provisions of these conditions, the property in the Supplies shall not pass to the Purchaser until MICOTROL has received payment in full of the price of the Supplies and all other Supplies agreed to be sold by MICOTROL to the Purchaser for which payment is then due.

2. MICOTROL shall have absolute authority to retake, sell or otherwise deal with or dispose of all or any part of the Supplies in which title remains vested in MICOTROL.

3. Until such time as the property in the Supplies passes to the Purchaser, the Purchaser shall hold the Supplies as MICOTROL's fiduciary agent, and shall keep the Supplies properly stored, protected and insured.

Until that time the Purchaser shall be entitled to resell or use the Supplies in the ordinary course of its business, but shall account to MICOTROL for the proceeds of sale or otherwise of the Supplies including insurance proceeds, and shall keep all such proceeds separate from any moneys or properties of the Purchaser and third parties.

4. If the Supplies are processed or reshaped by the Purchaser and if processing is done with goods that MICOTROL has no property in, MICOTROL shall become co-owner of the Supplies. The same shall apply if MICOTROL's Supplies are completely reshaped and mixed with other goods.

5. If third parties take up steps to pledge to otherwise dispose of the Supplies, the Purchaser shall immediately notify MICOTROL in order to enable MICOTROL to seek a court injunction in accordance with § 771 of the German Code of Civil Procedure. If the Purchaser fails to do so in due time he will be held liable for any damages caused.

6. MICOTROL shall on demand of the Purchaser release any part of the collateral if the value of the collateral held in favor of MICOTROL exceeds the value of the claims being secured. It is to MICOTROL's decision to release those parts of the collateral suitable for him.

7. In cases of fundamental non-performance of contractual obligations by the Purchaser, MICOTROL shall be entitled to take back the Supplies. The Purchaser shall be obliged to return the purchased Supplies. The taking back, the assertion of the retention of title or the seizure of the Secured Supplies by MICOTROL does not mean termination of the contract except if expressly stated by MICOTROL.

V. Time for Delivery and Delay

1. Observance of the stipulated time for delivery is conditional upon the timely receipt of all documents, necessary permits and releases, especially of plans to be provided by the Purchaser, as well as fulfillment of the agreed terms of payment and other obligations by the Purchaser. Unless these conditions are fulfilled on time, the time for delivery will be extended accordingly except where MICOTROL is responsible for the delay.

2. If non-observance of the time for delivery is due to force majeure such as mobilization, war, riot or similar events, e. g. strike, lockout or other non-predictable or grave operational breakdowns such time shall be extended accordingly.

3. If MICOTROL is responsible for a delay in delivery, the Purchaser who can establish credibly that he suffered a loss from such delay may claim agreed compensation of 0,5 % for every completed week of delay but in no event shall the aggregate of such compensation exceed a total of 5 % of the price of that part of the Supplies which, because of the delay, could not be put to the intended use.

4. Purchaser's claims for compensation which exceed the limits specified in para. V. 3. shall be excluded in all cases of delayed delivery even after expiry of an extension of time that may have been granted to MICOTROL. This exclusion shall not apply where in cases of wilful misconduct or gross negligence there is a legally binding liability on the part of MICOTROL. No change in the burden of proof to the detriment of the Purchaser is involved. Purchaser's right to terminate the contract shall remain unaffected after the expiry of an extension granted to MICOTROL that did not result in delivery.

5. If dispatch or delivery is delayed at Purchaser's request by more than one month after notice was given of the readiness for dispatch, the Purchaser may be charged storage costs for each month thereafter to the amount of 0,5 % of the price of the supplied goods but in no event shall the aggregate storage charges exceed a total of 5 % of the price. The parties to the contract are at liberty to furnish proof of higher or lower storage costs.

VI. Transfer of Risk

1. Even where "carriage paid" delivery has been agreed, the risk of damage to or loss of the Supplies shall pass to the Purchaser as follows:

a) in the case of Supplies to be delivered otherwise than at MICOTROL's premises, at the time of delivery or, if the Purchaser wrongfully fails to take delivery of the Supplies, the time when MICOTROL has tendered delivery of the goods. At the Purchaser's request and expense, Supplies shall be insured by MICOTROL against the ordinary risks of transport.

b) in the case of Supplies to be delivered at MICOTROL's premises "ex works" (Incoterms 1990), at the time when MICOTROL notifies the Purchaser that the goods are available for collection, at the latest when the Supplies are actually collected by the Purchaser

2. If the dispatch, the delivery, the beginning or completion of assembly or erection, the taking over into Purchaser's own service or the trial run is delayed for reasons within the Purchaser's responsibility, or if the Purchaser has failed for other reasons to accept delivery, the risk shall pass to the Purchaser.

VII. Taking Delivery

Deliveries, even with minor defects, have to be accepted by the Purchaser.

VIII. Warranty

For defects which include the absence of expressly warranted characteristics, MICOTROL shall be liable as follows:

1. MICOTROL shall, at his option and expense, repair, replace or newly provide any parts or services whose usefulness is impaired more than insignificantly within 6 months from the date of the transfer of risk - regardless of the period of operation - owing to circumstances that existed before the transfer of risk.

2. Warranty claims are subject to a limitation period of 24 months which starts at the date of the transfer of risk. Notice in writing shall be given to MICOTROL immediately after discovery of the defect.

3. In case of notification of a defect, Purchaser's payments may be withheld in reasonable proportion to the noticed defect. If the contract pertains to the conduct of a Purchaser's business, the Purchaser can withhold payments only if the legitimacy of the asserted complaint can be established beyond doubt.

4. MICOTROL shall be given adequate time and opportunity to remedy the defect. If it is refused these, MICOTROL shall have no liability for the defect.

5. If an adequate extension granted to MICOTROL expires without the defect being remedied, the Purchaser shall have the right to demand cancellation of the contract or a reduction of the purchase price.

6. The warranty does not cover natural wear and tear or damage arising, after the transfer of risk, from faulty or negligent handling, excessive strain, unsuitable equipment, defective workmanship, inappropriate foundation soil or from particular external influences not assumed under the contract, or from non-reproducible software errors. The warranty does not cover modifications or repairs carried out improperly by the Purchaser or by third parties.

7. The warranty period for repairs or replacement Supplies (of goods or services) shall be 24 months. It shall be the later of: (1) 12 months from the date of repair or replacement; or (2) the remaining length of the original warranty period for the Supplies. For those parts which cannot be put to the intended use because of the interruption of service, the warranty period shall be extended by the period of service interruption caused by the repair or replacement supply.

8. The periods specified in paras. 1., 2. and 7. shall not apply where longer periods are provided by law according to § 638 BGB (German Civil Code).

9. Except as provided above, any other warranty claims of the Purchaser against MICOTROL and MICOTROL's agent shall be excluded. However, clause XI. (Further liability) shall remain unaffected

IX. Industrial Property Rights and Copyright

1. If a third party, because of an infringement of an industrial property right or copyright (hereinafter called Property Rights) by products furnished by MICOTROL and used in conformity with the contract, asserts legitimate claims against the Purchaser, MICOTROL shall be liable to the Purchaser as follows:

a) At his own option and expense, MICOTROL shall either obtain a right to use the Supplies, modify the Supplies so as not to infringe the Property Rights or replace the Supplies. If this is not possible to MICOTROL on acceptable terms, it shall have to take back the product and refund the purchase price.

b) MICOTROL's aforesaid obligations shall exist only on condition that the Purchaser immediately notifies MICOTROL in writing of the claims asserted by the third party, that he does not acknowledge an infringement and that all countermeasures and settlement negotiations are reserved to MICOTROL. If the Purchaser stops using the product to reduce the damage or for other important reasons, he shall be obliged to make it clear to the third party that the suspended use does not mean acknowledgment of an infringement of Property Rights.

2. Claims of the Purchaser shall be excluded if he is responsible for an infringement of Property Rights.

3. Claims of the Purchaser shall also be excluded if the infringement of Property Rights was caused by specific demands of the Purchaser, by a use of the product not foreseeable by MICOTROL or by the product being altered by the Purchaser or being used together with products not provided by MICOTROL.

4. Further claims against MICOTROL shall be excluded. However, Clause XI. (Further liability) shall remain unaffected and so shall be Purchaser's right to terminate the contract.

X. Impossibility of Performance, Contract Adaptation

1. If it is impossible for MICOTROL to carry out the Supplies for reasons for which it is responsible, the Purchaser shall be entitled to claim damages but the Purchaser's claim for damages shall be limited to 10 % of the value of that part of the Supplies which, owing to the impossibility, cannot be put to the intended use. This shall not apply where in cases of wilful misconduct, of gross negligence or of initial impossibility, there is a legally binding liability. No change in the burden of proof to the detriment of the Purchaser is involved. Purchaser's right to terminate the contract shall remain unaffected.

2. Where unforeseeable events as described in Clause V, para.

2., substantially change the economic importance or the contents of the Supplies or considerably affect MICOTROL's business, the contract shall be adapted accordingly with due regard to the principle of good faith. Where this is not economically reasonable, MICOTROL shall have the right to terminate the contract. If MICOTROL wants to make use of this right of termination, he shall notify the Purchaser in writing immediately after becoming aware of the significance of the event. This shall apply even where at first an extension of the delivery time had been agreed with the Purchaser.

XI. Further Liability

1. All advice concerning utilization is given to the best knowledge of MICOTROL. The Purchaser is obliged to verify suitability and applicability of the advice concerning the intended use. The Purchaser is responsible for suitability and intended usage of MICOTROL's products. MICOTROL shall not be liable for advice concerning utilization.

2. Except as provided herein, any other claims for damages of the Purchaser shall be excluded regardless of whether they are based on positive breach of contractual obligations, violation of obligations in contract negotiations, breach of warranty, tort or other legal theory. This exclusion shall not apply where e.g. under the product liability law or in cases of wilful misconduct, of gross negligence, of the absence of warranted characteristics or of the fundamental non-performance of contractual obligations, there is a legally binding liability. However, liability for damages arising from the fundamental non-performance of contractual obligations shall be limited to the foreseeable damage normally covered by a contract except in cases of wilful misconduct or gross negligence. This limitation does not imply a change in the burden of proof to the detriment of the Purchaser.

XII. Choice of Forum

1. If the Purchaser is a businessman, the sole forum for all disputes arising directly or indirectly out of the contract shall be the place of the MICOTROL's head or branch office at MICOTROL's option.

2. All relations arising out of the contract shall be governed by German law not including the United Nations Convention on Contracts for the International Sale of Goods (CISG).

XIII. Validity of the Contract

Even in case of legal invalidity of individual items, the remaining parts of the contract shall remain binding save where adherence to the contract would mean an undue hardship on one of the parties.

Alzenau, 08. September 2003

MICOTROL International GmbH
Daimler Straße 6
D-63755 Alzenau
Tel.: ++49.6023.5056.80
Fax: ++49.6023.5056.99
eMail: info@micotrol.de

Comparison Table

For replacement of former Micotrol devices new up to date devices with nearly the same attributes and dimensions are available

Our Up To Date Products



Mcomfort
(0... 15A – 100A
Frequency Inverter



Mmiccompact 330
(0... 40A – 140A
Thyristor Voltage Regulator



Mdsm 331
(0... 40A – 140A
Th. Volt. Regulator

Former Micotrol Products		Our Up To Date Products		
		Mcomfort (0... 15A – 100A Frequency Inverter	Mmiccompact 330 (0... 40A – 140A Thyristor Voltage Regulator	Mdsm 331 (0... 40A – 140A Th. Volt. Regulator
Thyristor Voltage Regulators	301	○	●	○
	401 (WITTUR)	○	●	○
	10E2 (ZIEHL ABEGG)	○	●	○
	320D	○	●	○
	MICOMPACT 330 digital	○	●	○
	MICOMPACT LS digital	○	●	○
	302	○	●	○
	302 (KLEINDIENST)	○	●	○
	302 (ZIEHL ABEGG)	○	●	○
	402 (WITTUR)	○	●	○
	403	○	●	○
	320A	○	●	○
	DS-M10	○	○	●
	DS-M15	○	○	●
	DS-M16	○	○	●
	DS-M17	○	○	●
	DS-M20	○	○	●
	DS-M21	○	○	●
	DS-M331 (HAUSHAHN)	○	○	●
	Frequency Inverters	MICOVERT 340	●	○
MICOVERT 340LS with Thyssen Liftbus		●	○	○
MICOVERT 2000		●	○	○
MICOVERT 2001 with Thyssen Liftbus		●	○	○
MICOVERT 2000NG		●	○	○
MICOVERT 2001NG w. Thyssen Liftbus		●	○	○
LEM 30 (Lift Equip)		●	○	○

● easy and direct replaceble

● use analog/digital converter or replace encoder

○ replacement only together with modifications of cabinet and/or motor


MICOTROL
INTERNATIONAL

Micotrol International GmbH · Daimlerstrasse 6 · D-63755 Alzenau
Tel.: +49 (0) 6023 5056-80 · Fax: +49 (0) 6023 5056-99
e-mail: info@micotrol.de · www.micotrol.de

MICOTERMINAL 200X

MICOTERMINAL 200X
*Manual control terminal for
frequency-inverters*

Enter parameters
Referencing parameters
Error memory read-out
Read current inverter values
such as current, voltage,
frequency, temperature,
operating time, etc. in real time

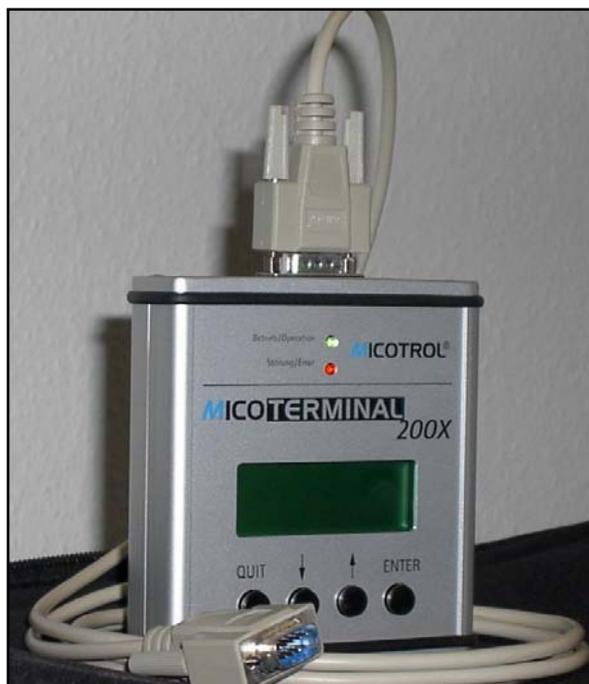

The handheld terminal is connected via the RS232 interface with the inverter (cable included). Connection and disconnection is possible during operation. The **MICOTerminal 200X** allows the same control and display functions as the inverter.

Compatible with Mcomfort and MICOVERT 2000/2001

Especially recommended for inverters with digital interface without display and keyboard

MICOTROL
INTERNATIONAL

Micotrol International GmbH · Daimlerstrasse 6 · 63755 Alzenau
Tel.: +49 (0) 6023 5056-80 · Fax: +49 (0) 6023 5056-99
e-mail: info@micotrol.de · www.micotrol.de